

26.8V, 15A高效升压转换器

26.8V, 15A Boost Converter

■ FEATURES

HT7179SPER Input voltage range: 2.7V to 25V,

Output voltage range: up to 26.8V

HT7179CSPER, HT7179DNER Input voltage range:

2.7V to 18V, Output voltage range: up to 22V

VIN pin voltage range: 6V~16V

Internal Fixed PWM frequency: 350kHz

• Programmable switch peak current limit: up to

15A

High Efficiency

95% (PVIN = 12V, VOUT=25V, IOUT =2A)

94% (PVIN = 12V, VOUT=25V, IOUT =4.5A)

93% (PVIN = 7.2V, VOUT=12V, IOUT =1.5A)

90% (PVIN = 7.2V, VOUT=12V, IOUT =5A)

96% (PVIN = 12V, VOUT=18V, IOUT =1.5A)

95% (PVIN = 12V, VOUT=18V, IOUT =6A)

1.0µA current consumption during shutdown

Two modes with different tr/tf for EMI solution

Programmable soft start

 Output overvoltage protection (at 28V), thermal shutdown protection

Pb-free Packages, ESOP16, QFN3.5×4.5-20L

·HT7179SPER输入电压范围: 2.7V-25V, 输出电

压范围: 最高26.8V

HT7179CSPER, HT7179DNER输入电压范围:

2.7V-18V, 输出电压范围: 最高22V

VIN脚电压范围: 6V~16V

・固定开关频率: 350kHz

・可编程峰值电流:最高15A

· 高转换效率:

95% (PVIN = 12V, VOUT=25V, IOUT =2A)

94% (PVIN = 12V, VOUT=25V, IOUT =4.5A)

93% (PVIN = 7.2V, VOUT=12V, IOUT =1.5A)

90% (PVIN = 7.2V, VOUT=12V, IOUT =5A)

96% (PVIN = 12V, VOUT=18V, IOUT =1.5A)

95% (PVIN = 12V, VOUT=18V, IOUT =6A)

·低关断功耗,关断电流1uA

· 支持两种tr/tf模式, 应对EMI挑战

・可编程软启动

・輸出过压 (28V)、热关断等保护

· ESOP16, QFN3.5×4.5-20L无铅封装

■ APPLICATIONS

Wireless/ Speakers
 Portable Speakers

Power BankChargers

Power Interface (USB Type-C, Thunderbolt)

POS Terminal
 Tablet PC/Note Book

· 无线音箱 · · · · · · 便携式音箱

・移动电源・充电设备

·USB TYPE-C 电源传输 · 拉杆音箱

·平板电脑,笔记本电脑 · POS机终端



DESCRIPTION

The HT7179 is a high-power density, asynchronous boost converter with a $20m\Omega$ power switch to provide a high efficiency and small size solution in portable systems. The HT7179 has wide input voltage range from 2.7 V to 25 V to support applications with single cell, two cell Lithium batteries and 12V lead-acid batteries. The device has 15A switch current capability and can provide an output voltage up to 26.8V.

The HT7179 also implements a programmable soft-start function and an adjustable switching peak current limit function. HT7179 integrates two modes with different tr/tf to balance different requirements of EMI and efficiency.

In addition, the device provides 28V output overvoltage protection, and thermal shutdown protection.


HT7179是一款高功率异步升压转换器,集成 20m Ω 功率开关管,为便携式系统提供高效的 小尺寸解决方案。

HT7179具有2.7V至25V宽输入电压范围,可为采用单节或两节锂电池,或12V铅酸电池的应用提供支持。该器件具备15A开关电流能力,并且能够提供高达26.8V的输出电压。

HT7179还支持可编程的软启动,以及可调节的 开关峰值电流限制。HT7179还支持两种不同的 tr/tf,以适应不同的EMI和效率需求。

此外,该器件还提供有28V输出过压保护、和热 关断保护。

■ TYPICAL APPLICATION

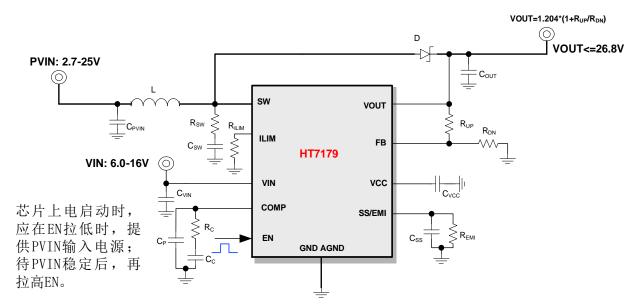


For HT7179SPER, PVIN = 2.7~25V, VOUT<=26.8V For HT7179CSPER & HT7179DNER, PVIN = 2.7~18V, VOUT<=22V




■ ORDERING INFORMATION

Ordering Number	Package Type	Marking	Operating Temperature Range	Shipping Package / MOQ
HT7179SPER	ESOP16	HT7179 YYYMAAB ¹	-40℃~85℃	Tape and Reel / 2500pcs
HT7179CSPER	ESOP16	HT7179 YYYMAAB	-40℃~85℃	Tape and Reel / 2500pcs
HT7179DNER	QFN3.5×4.5-20L	HT7179 YYYMAAB	-40℃~85℃	Tape and Reel / 5000PCS

Ordering Number

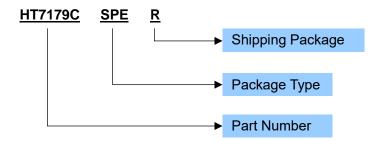

Production Tracking Code

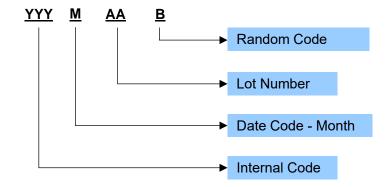


Copyright©2025, Heroic Technology


-3-

¹ YYYMAAB is production tracking code



■ TERMINAL CONFIGURATION

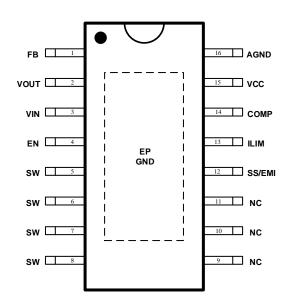

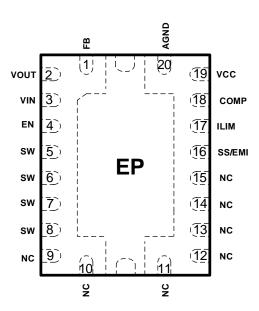

SPE (ESOP16) Top View

DNE (QFN3.5×4.5-20L) Top View

■ TERMINAL FUNCTION

Termin	nal No.	N	1/01	Description
SPE	DNE	Name	I/O ¹	Description
1	1	FB	I	Voltage feedback. 电压反馈
2	2	VOUT	P	Output pin. 输出电压
3	3	VIN	P	IC power supply input. 电源供电
4	4	EN	I	Enable logic input. Logic high level enables the device. Logic low level disables the device and turns it into shutdown mode. 使能输入,高电平芯片工作;低电平芯片进入关断状态
5,6,7,8	5,6,7,8	SW	P	The switching node pin of the converter. 开关转换端
9,10,11	9,10,11, 12,13,14 ,15	NC	/	No internal connection, connect to GND. 内部无连接,可连接到地
12	16	SS/EMI	0	Soft-start programming pin. An external capacitor Css connected to ground sets the ramp rate of the internal error amplifier's reference voltage during soft-start, 100nF is usually recommended. 软启动时间设置,接电容Css到地,一般建议用100nF Also used as mode setting for different tr/tf, an external resistor connected to ground sets a flatter tr/tf. 同时作为tr/tf设置脚,当同时外接1个330k电阻到地时,选择较缓的tr/tf
13	17	ILIM	I	Adjustable switch peak current limit. An external resister should be connected between this pin and the GND pin. 峰值电流设置端,接电阻到地
14	18	COMP	О	Output of the internal error amplifier, the loop compensation network should be connected between this pin and the GND pin. 环路补偿端
15	19	VCC	О	Output of the internal regulator. A ceramic capacitor of 1uF is required between this pin and ground. 内部整流输出,外接1uF电容到地
16	20	AGND	G	Analog ground of the IC. 模拟地
EP	EP	GND	G	Provides both electrical and thermal connection from the device to the board. A matching ground pad must be provided on the PCB and the device connected to it via solder. For proper electrical operation, this ground pad must be connected to the system ground. 既是地,又是散热PAD

Copyright©2025, Heroic Technology

¹ I: Input; O: Output; G: Ground; P: Power; BST: BOOT Strap; OD: Open drain



■ SPECIFICATIONS¹

Absolute Maximum Ratings*2

	PARAMETER	Symbol	MIN	MAX	UNIT
	VOUT, HT7179SPER		-0.3	28	
	VOUT, HT7179CSPER, HT7179DNER		-0.3	24	
Voltage range	SW	/	-0.3	34	V
	VIN		-0.3	18	-
	EN, VCC, COMP		-0.3	7	
	FB		-0.3	3.6	
Operating tempera	ture range	TA	-40	85	$^{\circ}$ C
Operating junction	temperature range	TJ	-40	150	${\mathbb C}$
Storage temperatu	re range	Tstg	-50	150	$^{\circ}$ C

Recommended Operating Conditions

PARAMETER	Symbol	CONDITION	MIN	TYP	MAX	UNIT
Input Voltage range	Vin	VIN pin	2.7		16	V
Output Voltage range	Vouт	VOUT pin, HT7179CSP ER, HT7179DNE R			22	V
		HT7179SPE R			26.8	
Operating temperature	Ta		-40	25	85	$^{\circ}$
Operating junction temperature	TJ		-40		125	$^{\circ}$

Electrical Characteristics

Condition: Ta = 25°C, V_{IN} = 2.7V-13.2V, V_{OUT}=4.5-13.2V, unless otherwise specified.

Power Supply and Reference Voltage

PARAMETER	Symbol	CONDITION	MIN	TYP	MAX	UNIT
Under-voltage lockout	Vuvlo	VOUT Rising		2.7		V
(UVLO) threshold	VUVLO	VOUT Falling		2.5		V
Quiescent current	lα	V _{FB} = 1.3V, No switching		0.35		mA
Shutdown current	I _{SD}	IC disabled, no load, no feedback resistor divider		1		uA
VCC regulation	Vcc	PV _{IN} = 3.6V, V _{OUT} = 12V, light load		5.7		V
VCC regulation	V CC	$PV_{IN} = 3.6V, V_{OUT} = 12V, I_{LOAD} = 0.5A$		5.3		V
Reference voltage at the FB pin	V_{REF}			1.204		V
Output overvoltage protection	V_{OVP}			28		V
Soft-start charging current	Iss			5		uA

EN Input

PARAMETER	Symbol	CONDITION	MIN	TYP	MAX	UNIT
EN high threshold voltage	V _{ENH}		1.5			٧
EN low threshold voltage	V _{ENL}				0.4	V
EN internal pull-down resistance	Ren			800		kΩ

¹ Depending on parts and PCB layout, characteristics may be changed.

Copyright©2025, Heroic Technology

Stresses beyond those listed under absolute maximum ratings may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated under recommended operating conditions is not implied. Exposure to absolute—maximum—rated conditions for extended periods may affect device reliability.



POWER SWITCH

PARAMETER Symbol CONDITION		MIN	TYP	MAX	UNIT	
MOSFET on- resistance	on- R _{DS(on)} Including wire bond			20		mΩ
Operation Frequency	Fosc			350		kHz

CURRENT LIMIT


PARAMETER	Symbol	CONDITION	MIN	TYP	MAX	UNIT
Peak switch current limit	I _{LIM}				15	Α


THERMAL SHUTDOWN


PARAN	/IETER	Symbol	CONDITION	MIN	TYP	MAX	UNIT
Thermal threshold	shutdown	T _{SD}			150		${\mathbb C}$
Thermal hysteresis	shutdown	T _{SD_HYS}			20		$^{\circ}$



■ TYPICAL OPERATING CHARACTERISTICS

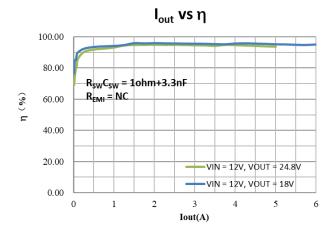

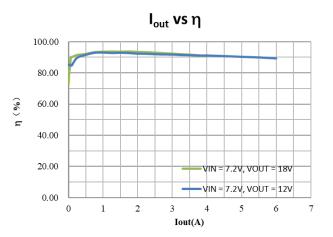

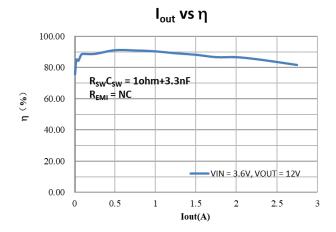



■ APPLICATION INFORMATION

1 Operation

The HT7179 is a high-power density, asynchronous boost converter with a $20m\Omega$ power switch to provide a high efficiency and small size solution in portable systems. The switching frequency is 360kHz. HT7179 operates with pulse width modulation (PWM), and improves the efficiency at light load with the pulse frequency modulation (PFM).

2 Enable, Startup, and tr/tf (EN and SS/EMI pin)

The HT7179 has an adjustable soft start function to prevent high inrush current during start-up. To minimize the inrush current during start-up, an external capacitor, connected to the SS/EMI pin and charged with a constant current, is used to slowly ramp up the internal positive input of the error amplifier. The larger the capacitance at the SS/EMI pin, the slower the ramp of the output voltage and the longer the soft-start time. A 1uF capacitor is usually sufficient for most applications.

HT7179 integrates two modes with different tr/tf. With a single capacitor (C_{SS}) connected betweeen SS/EMI pin and Ground, the mode with steep tr/tf will be selected, HT7179 operates with a higher efficiency and poorer EMI performance. However, if a capacitor (C_{SS}) paralleled with a resistor 330k (R_{EMI}) is placed between SS/EMI pin and Ground, the mode with flatter tr/tf is selected, HT7179 operates with a lower efficiency and better EMI performance.

When the EN pin is pulled into logic low (below 0.4V), the HT7179 goes into the shutdown mode and stops switching. Only when EN pin is pulled into logic high (above 1.5V), the HT7179 works. During startup procedures, bring up PVIN power supplies with EN pulled down, until PVIN are stable and then pull up EN.

3 Adjustable Peak Current Limit (ILIM pin)

To avoid an accidental large peak current, an internal cycle-by-cycle current limit is adopted. The low-side switch is turned off immediately as soon as the switch current touches the limit. The peak switch current limit can be set by a resistor (R_{ILIM}) at the ILIM pin to ground. The relationship between the current limit and the resistance is as the following figure. The current limit should be set lower than 15A.

HT7179 是一款高功率异步升压转换器,集成 20m Ω 功率开关管,为便携式系统提供高效的小尺寸解决方案。其开关频率是 350kHz。HT7179 工作在 PWM 模式,但在轻载时工作在 PFM 模式以提高工作效率。

HT7179 具有可调节软启动功能,以防止芯片启动瞬间的大电流,其通过 SS/EMI 端外接电容(C_{SS})实现,C_{SS}越大,软启动时间越长,输出电压启动越缓。1uF的电容可满足大多数应用。

HT7179 具有两种不同 tr/tf 时间的模式。当 SS/EMI 引脚仅接一个电容(C_{SS})到地时,tr/tf 更 陡,此时 HT7179 的效率更高,但 EMI 表现更差;当 SS/EMI 引脚接一个电容(C_{SS})并联 330k 电阻到地时,tr/tf 更缓,此时 HT7179 的效率更低,但 EMI 表现更好。

芯片的 EN 脚可控制芯片的开启与关断。EN 脚拉低,芯片进入关断模式,停止升压; EN 脚拉高,芯片进入升压工作模式。芯片上电启动时,应在 EN 拉低时,提供 PVIN 输入电源;待 PVIN 稳定后,再拉高 EN。

为避免可能的突发性大电流尖峰,HT7179 内置了逐周期过流限制保护功能。一旦开关电流 达到设定的峰值电流限流值,低端管立即关闭, 以防止芯片大电流损坏。

峰值电流限流值可通过 ILIM 引脚接电阻 (R_{ILIM})至地设置,关系如下图。峰值电流限制值设置应小于 15A。



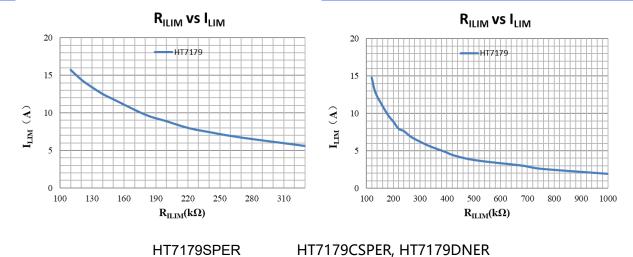


Figure 1 Peak Current Limit (ILIM) vs ILIM terminal resistor (RILIM)

4 Output Voltage Setting (FB pin)

The output voltage is set by an external resistor divider (R_{UP} , R_{DN} in the Typical Application Circuit). To get the output voltage VOUT, the Value of R_{UP} and R_{DN} can be calculated as:

输出电压值 VOUT 可通过 FB 端的 R_{UP}, R_{DN} 电阻决定:

$$V_{OUT} = V_{REF} \times (1 + \frac{R_{UP}}{R_{DN}})$$

Where $V_{REF} = 1.204V$.

其中 V_{REF} = 1.204V。

Some typical output voltages can be set as the following parameters

典型电压设置参数如下表。

Table 1 Output Voltage Settings

Vout(V)	$\mathrm{R}_{\mathrm{UP}}(\Omega)$	$\mathrm{R}_{\mathrm{DN}}(\Omega)$
9.4	510k	75k
12.2	510k	56k
15.5	510k	43k
23.9	510k	27k

5 Protection Function

5.1 Under-voltage Lockout (UVLO)

The UVLO circuit prevents the device from malfunctioning at low input voltage and the battery from excessive discharge. The HT7179 has both VOUT UVLO function and VCC UVLO function. It disables the device from switching when the falling voltage at the VOUT pin trips the UVLO threshold $V_{\rm UVLO},$ which is typically 2.5V. The device starts operating when the rising voltage at the VOUT pin is above the $V_{\rm UVLO}$, which is typically 2.7V. It also disables the device when the falling voltage at the VCC pin trips the UVLO threshold, which is typically 2.1V.

欠压锁定电路可防止低电压下电路的故障, 以及输入端电阻的过放电。HT7179的 VOUT端和 VCC 端均有该功能。当电压低于相应阈值, 芯片关闭。电压高于相应阈值,芯片开启。



5.2 Over-voltage Protection

If the output voltage at the VOUT pin is detected above 28 V (typical value), the HT7179 stops switching immediately until the voltage at the VOUT pin drops the hysteresis value lower than the output overvoltage protection threshold. This function prevents overvoltage on the output and secures the circuits connected to the output from excessive overvoltage.

如果输出电压高于 28V (典型值), HT7179 停止工作,直至输出电压降低至低于阈值。

5.3 Thermal Shutdown

A thermal shutdown is implemented to prevent damages due to excessive heat and power dissipation. Typically, the thermal shutdown happens at a junction temperature of 150°C. When the thermal shutdown is triggered, the device stops switching until the junction temperature falls below typically 130°C, then the device starts switching again.

当芯片内部结温高于 **150**℃时,过温关断保护启动,芯片停止工作,直至芯片内部结温降低至 **130**℃。该功能可有效防止芯片损坏。

6 Application Note

6.1 Inductor Selection

Because the selection of the inductor affects the power supply's steady state operation, transient behavior, loop stability, and boost converter efficiency, the inductor is the most important component in switching power regulator design. Three most important specifications to the performance of the inductor are the inductor value, DC resistance, and saturation current.

To be simplified, the inductor value can be set as 4.7uH which can be used in most cases.

The rated current, especially the saturation current should be larger than the peak current during the whole operation. The peak current can be calculated as follows.

电感的选择直接影响到电源的稳定, 瞬态表现, 环路稳定, 升压转换效率, 因此, 电感是升压电路中最为重要的器件。其中, 电感值、饱和电流、直流阻抗 DCR 为重要的选型指标。

对于电感值,简单来说,4.7uH 能满足大多数应用。

对于饱和电流,其应大于芯片所有工作条件 下的最大电流峰值。最大电流峰值可通过如下计 算。

$$\begin{split} I_{Lpeak} &= I_{DC} + \frac{I_{PP}}{2} \\ I_{DC} &= \frac{V_{OUT} \times I_{OUT}}{V_{IN} \times \eta} \\ I_{PP} &= \frac{1}{L \times (\frac{1}{V_{OUT} - V_{IN}} + \frac{1}{V_{IN}}) \times f_{SW}} \end{split}$$

Boost converter efficiency is affected significantly by the inductor's DC resistance (DCR), equivalent series resistance (ESR) at the switching frequency, and the core loss. An inductor with lower DCR and ESR would increase the efficiency significantly.

The inductor should be placed as close as possible to the SW pin. For a lower EMI radiation, connecting a resistor and a capacitor in series to the ground would be helpful. 10hm resistor and 3.3nF capacitor (the package of resistor and capacitor is recommended to be not smaller than 1206) would be recommended in most cases.

升压转换效率受电感的DCR和高频时的 ESR影响较大,所以选择较低的DCR和ESR能有 效提升效率。

另外, 电感在PCB Layout时, 应紧靠SW脚。

最后,在SW端加入RC串联电路到地,能有效减小电路产生的EMI辐射。一般的,R=1ohm,C=3.3nF,(建议均使用不小于1206的封装),可满足应用。



6.2 Output Capacitor Selection (COUT)

To be simplified, we recommend low-ESR capacitors of 1 u F // 10 u F // 10 u F // 470 u F ("//" represents paralleled) be placed as close as possible to the Schottky diode for small output voltage ripple.

Capacitors can lose most of their capacitance at rated voltage. Therefore, leave margin on the voltage rating to ensure adequate effective capacitance.

In detail, for the require output voltage ripple, use the following equations to calculate the minimum required effective capacitance C_{OUT} .

为了达到良好的滤波和减小电源纹波,一般的,低 ESR 的 1uF//10uF//10uF//470uF 电容尽量靠近二极管引脚放置,可满足大部分应用。

需要注意的是,电容在额定电压下,容值损 失严重,因此,电容的额定电压应留有余量的大 于最大输出电压。

详细的,最低要求的电容值应满足以下条件:

$$V_{ripple_dis} = \frac{(V_{OUT} - V_{IN_{MIN}}) \times I_{OUT}}{V_{OUT} \times f_{SW} \times C_{OUT}}$$

$$V_{ripple_ESR} = I_{Lpeak} \times R_{C_ESR}$$

Where

- Vripple_dis is output voltage ripple caused by charging and discharging of the output capacitor.
- Vripple_ESR is output voltage ripple caused by ESR of the output capacitor.
- $V_{IN\ MIN}$ is the minimum input voltage of boost converter..
- V_{OUT} is the output voltage..
- I_{OUT} is the output current.
- I_{Lpeak} is the peak current of the inductor.
- f_{SW} is the converter switching frequency.
- R_{C ESR} is the ESR of the output capacitors.

- V_{ripple_dis} 是由输出电容充放电引起的输出电压纹波。
- Vripple_ESR 是由输出电容 ESR 引起的输出电压纹波。
 - V_{IN MIN} 是最小输入电压。
 - · Vour 是输出电压。

其中:

- · lout 是输出电流。
- ILpeak 是电感的峰值电流。
- fsw 是开关频率。
- Rc ESR 是输出电容的 ESR.

6.3 Diode Selection

Schottky diode with fast recovery times and low forward voltages are recommended. Ensure the diode average and peak current rating exceed the average output current and peak inductor current. In addition, the diode's reverse breakdown voltage must exceed the output voltage.

肖特基二极管应选择快恢复时间和低正向 电压。应确保二极管的平均额定电流、峰值额定 电流超过输出平均电流和电感峰值电流。此外, 二极管的反向击穿电压应大于输出电压。



6.4 Loop Stability

The HT7179 requires external compensation, which allows the loop response to be optimized for each application. The COMP pin is the output of the internal error amplifier. An external compensation network comprised of resister RC, ceramic capacitors C_C and C_P is connected to the COMP pin.

To be simplified, R_C is $33k\Omega$, CC is 3.3nF, and C_P is 47pF. But notice that this setting can only be adopted in most cases. In detail, the compensation network parameters can be calculated as follows.

(1) Set the cross over frequency, fc

The first step is to set the loop crossover frequency, f_C . The higher crossover frequency, the faster the loop response is. It is generally accepted that the loop gain cross over no higher than the lower of either 1/10 of the switching frequency, fSW, or 1/5 of the RHPZ frequency, fRHPZ. It's proper to use a fixed parameter of 10kHz for f_C .

可针对不同应用改善环路响应。
 一般的, $R_C = 56k\Omega$, $C_C = 3.3nF$, $C_P = 47pF$,可满足大部分应用。COMP 端环路补偿设置很

外接一个补偿电路(典型电路中的 R_{C} , C_{C} , C_{P})

COMP 是内部误差信号放大器的输出,其

重要,若不合理,会造成升压在重载下提早不稳, 且严重影响效率。需根据具体应用调试,合理配置具体的,参数可通过如下步骤计算:

(1)设置交叉频率 fc

 $f_{\rm C}$ 频率越高, 环路响应越快,但其不能大于 1/10 的 $f_{\rm SW}$ 和 1/5 的 $f_{\rm RHPZ}$,一般可直接取值 10kHz。其中:

$$f_{RHPZ} = \frac{R_O \times (1 - D)^2}{2\pi \times L}$$
 (2)设置 R_C

(2) Set the compensation resistor, R_C .

$$R_C = \frac{2\pi \times V_{OUT} \times R_{sense} \times f_C \times C_O}{(1-D) \times V_{REF} \times G_{EA}}$$

(3) Set the compensation zero capacitor, C_C .

$$C_C = \frac{R_O \times C_O}{2 \times R_C}$$
(4)设置 C_P

(4) Set the compensation pole capacitor, C_P .

$$C_P = \frac{R_{ESR} \times C_O}{R_C}$$

If the C_P is less than 10pF, it can be left open.

- R_O is the output load resistance.
- D is the switching duty cycle. 1 D = V_{IN} / V_{OUT}
- Rsense is the equivalent internal current sense resistor, which is 0.084 Ω .
- C_O is output capacitor.
- V_{REF} is the reference voltage at the FB pin, which is 1.204V.
- G_{EA} is the amplifier's transconductance, which is 190uA/V.
- ${}^{\bullet}$ R_{ESR} is the equivalent series resistance of the output capacitor.

如果 C_P 小于 10pF, 其可悬空。

- Ro 是输出负载。
- D 为占空比, 1 D = V_{IN} / V_{OUT}。
- Rsense 是内部等效电流感应电阻,为 0.084Ω 。
- Co 是输出电容。
- V_{REF} 是 FB 脚的电压,为 1.204V。
- GEA 是误差放大器跨阻吗,为 190uA/V。
- · RESR 是输出滤波电容的等效串联。



6.5 Layout Considerations

As for all switching power supplies, especially those running at high switching frequency and high currents, layout is an important design step. If layout is not carefully done, the regulator could suffer from instability and noise problems.

- Use integral GND ground plane under the chip
- Minimize the length and area of all traces connected to the SW pin
- The power traces, consisting of the GND trace, the SW trace, the PVIN trace and the VOUT trace should be kept short, direct and wide.
- The input capacitor needs to be close to inductor L and GND pin in order to reduce the input supply ripple. The output capacitor needs to be close to Diode and GND pin in order to reduce the output supply ripple.
- The resistor divider R_{UP} and R_{DN} must be connected to FB pin directly as closely as possible.
- The layout should also be done with well consideration of the thermal as this is a high-power density device. A thermal pad that improves the thermal capabilities of the package should be soldered to the large ground plate, using thermal vias underneath the thermal pad.

对于 DCDC 电源,特别是运行在大电流、高频率状态下,Layout 是非常关键的因素,不佳的 Layout 可能影响其工作的稳定。

- 芯片下面应尽量使用完整铺地。
- SW 走线尽量短, 低阻抗。
- 电源走线,包括 GND、SW、PVIN、VOUT, 应尽可能短而粗。
- 输入电容应尽可能靠近相应引脚和器件(电感L),并以低阻抗良好接地。若有条件,尽量选择ESR 小的滤波电容,或者容值足够大,以提高开关管打开瞬间,给电感充电的能量。尤其是单节锂电池供电情况,若输入端纹波较大,可能造成芯片欠压保护。电源至电感、SW 的走线应尽可能短而低阻抗。

输出电容应尽可能靠近二极管,并以低阻抗良好接地。电源输出走线应尽可能短而低阻抗。滤波小电容尽量靠近二极管摆放,以降低 OUT 上的电压毛刺,以及降低 EMC 辐射。


- R_{UP}和 R_{DN} 尽量靠近 FB 引脚。
- 芯片背部的散热片应良好接至 PCB 表面露铜的地,并通过过孔将热量传递至背面大面积地平面,以增加散热面积。


Copyright©2025, Heroic Technology




■ PACKAGE OUTLINE

SPE (ESOP16)

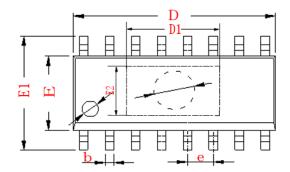









/J =/n	尺寸				
名称	Min	Max			
A1	0. 1	0. 25			
A2	1. 25	1. 55			
b	0. 33	0. 51			
E	3.8	4			
E1	5. 8	6. 2			
D	9. 8	10. 2			
е	1. 27B	SC			
С	0. 17	0. 25			
L	0. 4	1. 27			
θ	0°	8°			
D1	4. 3	4. 6			
E2	2. 3	2. 5			




DNE (QFN3.5×4.5-20L), Unit: mm

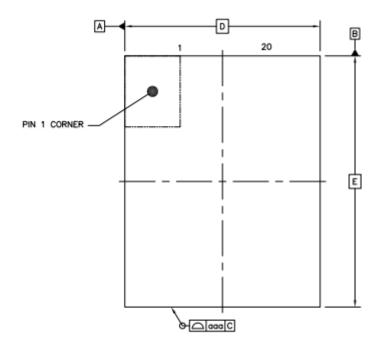



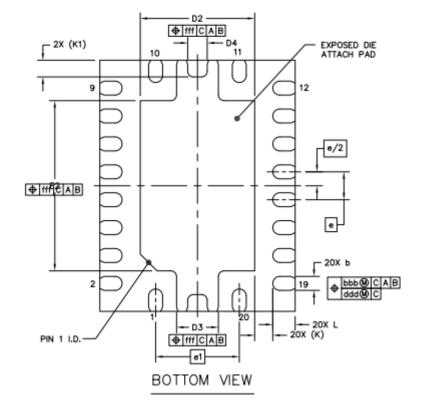

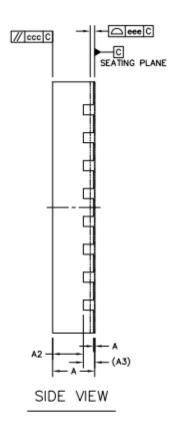



		SYMBOL	MIN	NOM	MAX	
TOTAL THICKNESS	A	0.7	0.75	0.8		
STAND OFF		A1	0	0.02	0.05	
MOLD THICKNESS		A2		0.00		
L/F THICKNESS		А3		0.203 REF		
LEAD WIDTH		ь	0.2	0.25	0.3	
BODY SIZE	X	D		3.5 BSC		
BODT SIZE	Y	E		4.5 BSC		
LEAD PITCH		е		0.5 BSC		
LEAD PITCH		e1		1.5 BSC		
	X	D2	1.95	2.05	2.15	
EP SIZE	Y	E2	2.95	3.05 0.75	3.15	
	X	D3	0.65	0.75	0.85	
EP EDGE TO EP EDGE		D4	0.25	0.35 0.4		
LEAD LENGTH		L	0.3	0.4	0.5	
EP EDGE TO PACKAGE	EDGE	K1		0.3 REF		
LEAD TIP TO EXPOSED	PAD EDGE	К		0.325 REF		
PACKAGE EDGE TOLERA	NCE	aaa		0.1		
MOLD FLATNESS		ccc		0.1		
COPLANARITY		eee		0.08		
LEAD OFFSET		bbb		0.1		
LEAD OFFSET		ddd		0.05		
EXPOSED PAD OFFSET		fff	0.1			
		 				



IMPORTANT NOTICE

注意

Heroic Electronic Technology (Jiaxing) Co., Ltd (HT) reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any products or services. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete.

禾润电子科技(嘉兴)股份有限公司(以下简称HT)保留对产品、服务、文档的任何修改、更正、提高、改善和其他改变,或停止提供任何产品和服务的权利。客户在下单和生产前应确保所得到的信息是最新、最完整的。

HT assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using HT components.

HT对相关应用的说明和协助以及客户产品的板级设计不承担任何责任。

HT products are not authorized for use in safety-critical applications (such as life support devices or systems) where a failure of the HT product would reasonably be expected to affect the safety or effectiveness of that devices or systems.

HT的产品并未授权用于诸如生命维持设备等安全性极高的应用中。

The information included herein is believed to be accurate and reliable. However, HT assumes no responsibility for its use; nor for any infringement of patents or other rights of third parties which may result from its use.

本文中的相关信息是精确和可靠的,但HT并不对其负责,也不对任何可能的专利和第三方权利的侵害负责。

Following are URLs and contacts where you can obtain information or supports on any HT products and application solutions:

下面是可以联系到我公司的相关链接和联系方式:

禾润电子科技 (嘉兴) 股份有限公司

Heroic Electronic Technology (Jiaxing) Co., Ltd.

地址: 浙江省嘉兴市南湖区亚太路906号科创CBD园区21号楼11层

Add: 11th floor, Building 21, No. 906, Yatai Road, Jiaxing, Zhejiang Province

Sales: 0573-82586608, sales@heroic.com.cn Support: 0573-82586151, support@heroic.com.cn Website: www.heroic.com.cn; wap.heroic.com.cn

Wechat MP: HEROIC_JX

请及时关注禾润官方微信公众号,随时获取最新产品信息和技术资料!

