

1. 特性

- 输出配置
 - 立体声 2.0: 2x25W (8Ω, 21V, THD + N = 1%)
 - 立体声 2.0: 2x23W (6Ω, 18V, THD + N = 1%)
- 供电电压范围
 - PVDD: 4.5V – 21V
 - DVDD: 1.8V 或者 3.3V
- 静态功耗
 - 31.5mA at PVDD=12V, BD
 - 18.5mA at PVDD=12V, 1SPW
- 音频性能指标
 - Noise: ≤38uVrms
 - THD+N ≤ 0.03% at 1W, 1kHz
 - SNR ≥ 107dB (A-weighted)
 - DC offset ≤ ±5mV
- 音频输入信号格式
 - 3-wire I2S, LJ,RJ, TDM (无需 MCLK)
 - Fs 支持 32/44.1/48/88.2/96/176.4/192kHz 采样率
 - 支持独立回声消除通道 Sdout
- 音频 DSP 算法
 - 2x15 EQs +3-band DRC+AGL+3*post Eqs
 - 支持动态低音增强算法
- 控制模式
 - 支持 I2C 软件配置模式
 - 支持硬件 IO 控制模式, 无需 I2C 寄存器控制
- 保护功能
 - 过流/过压(23V)/过温/欠压/直流保护
 - 过流保护门限 6.5A
 - 实时供电电压/芯片温度监测可读出
 - 支持系统级热管理保护
- 调音及系统集成
 - 一站式 GUI 调音软件 ASATP, 驱动级整体解决方案
 - 支持上位机一键生成配置文件

2. 应用

- 专业音响设备
- 智能音箱
- 条形音响
- 电视
- 笔记本电脑
- 会议系统

3. 说明

AU6815 是一款数字输入型, 双通道立体声, 高效的音频 Class D 功率放大器, 其最大输出功率可达 2x25W 或者 1x50W。

AU6815 采用创新的调制模式, 可以有效降低静态功耗, 提升续航时间。AU6815 内部集成有 32 位的高精度音频 DSP, 可提供包括 2x15 个均衡器, 3 段 DRC 以及 AGL 等调音算法。此外, 为了进一步增强小音量下的低音表现, AU6815 还支持动态低音增强算法 DPEQ。AU6815 内部 DSP 处理带宽最大支持 96kHz (192kHz 采样率)。

在音质表现方面, AU6815 的 THD+N 指标可以达到 0.03% 以下的水平, 此外极低的直流偏置电压使得 AU6815 在开机关机 pop 音方面具备极其出色的性能。

作为一款中大功率音频功率放大器, AU6815 在热管理方面支持四档过温报警和过温度关断保护, 此外该芯片温度可以通过寄存器连续输出, 方便系统做整体热管理。在喇叭保护方面, AU6815 还支持过流/过压/欠压/直流保护等。

AU6815 支持 TSSOP-28 封装, 无需散热片, 其额定温度范围为 -40°C 至 +85°C。有关订购信息, 请参见表 1。

Table 1 lists the order information.

Table 1. Order Information

ORDER NUMBER	PART NUMBER	CH (#)	PACKAGE	MARK	OUTPUT POWER (W)	DIGITAL INPUT	PVDD (TYP) (V)	OPERATING TEMP (°C)	PACKAGE OPTION
AU6815ATSSOP28P	AU6815	2	TSSOP-28	TSSOP28P	2 × 25W	Yes	21V	-40-85	3000

- Devices can be ordered via the following two ways:
1. Place orders directly on our website (www.analogyssemi.com), or;
 2. Contact our sales team by mailing to sales@analogyssemi.com.

4. PIN CONFIGURATION AND FUNCTIONS

Figure 1 illustrates the pin configuration of the AU6815 .

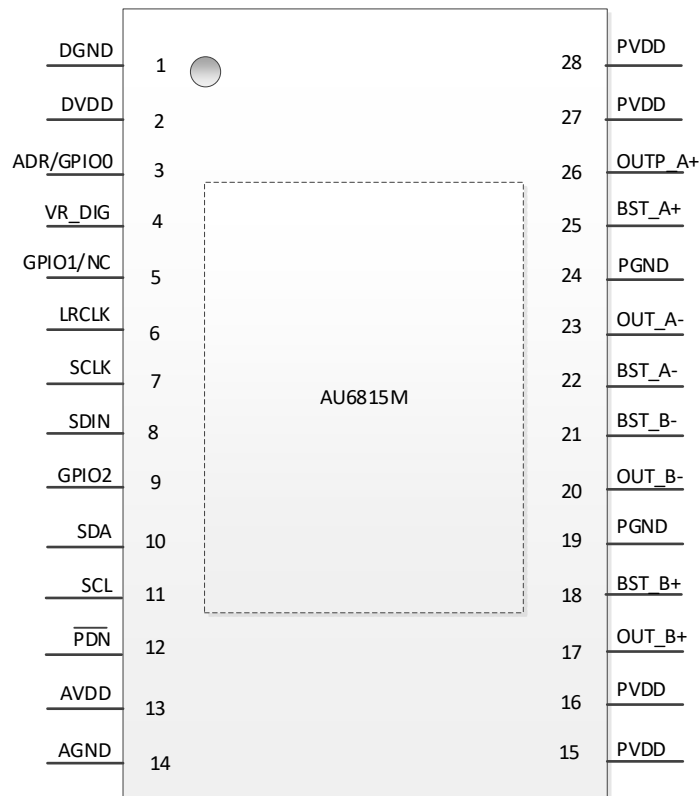


Figure 1. Pin Configuration

Table 2 lists the pin functions

Table 2. Pin Functions

NAME	POSITION	TYPE ⁽¹⁾	DESCRIPTION
DGND	1	P	Digital ground
DVDD	2	P	3.3V or 1.8V digital power supply
ADR/GPIO0	3	DI/O	Different I ² C device address can be set by selecting different pull-up resistor to DVDD. Or it can be used as GPIO0 and can be configured as FAULT.
VR_DIG	4	P	Internally regulated 1.8V digital supply voltage. This pin must not be used to drive external devices.
GPIO1/NC	5	DI/O	Optional for GPIO1 or NC or DGND.
LRCLK	6	DI	Word select clock for the digital signal that is active on the serial port's input data line. In I ² S, LJ, and RJ, this corresponds to the left channel and right channel boundary. In TDM mode, this corresponds to the frame sync boundary.
SCLK	7	DI	Bit clock for the digital signal that is active on the input data line of the serial data port.
SDIN	8	DI	Data line to the serial data port
GPIO2	9	DO	Default as serial Audio data output Sdout or use as a common GPIO with multi functions.
SDA	10	DI/O	I ² C serial control data interface input/output
SCL	11	DI	I ² C serial control clock input
PDN	12	DI	Power-down, active-low. PDN places the amplifier in Shutdown, and turns off all internal regulators. Low—Power down device; High—Enable device.
AVDD	13	P	Internally regulated 5V analog supply voltage. This pin must not be used to drive external devices.

NAME	POSITION	TYPE ⁽¹⁾	DESCRIPTION
AGND	14	P	Analog ground
PVDD	15, 16, 27, 28	P	PVDD voltage input
OUT_B+	17	O	Positive pin for differential speaker amplifier output B+
BST_B+	18	P	Connection point for the OUT_B+ bootstrap capacitor which is used to create a power supply for the high-side gate drive for OUT_B+
PGND	19, 24	P	Ground reference for power device circuitry. Connect this pin to system ground.
OUT_B-	20	O	Negative pin for differential speaker amplifier output B
BST_B-	21	P	Connection point for the OUT_B- bootstrap capacitor which is used to create a power supply for the high-side gate drive for OUT_B-
BST_A-	22	P	Connection point for the OUT_A- bootstrap capacitor which is used to create a power supply for the high-side gate drive for OUT_A-
OUT_A-	23	O	Negative pin for differential speaker amplifier output A-
BST_A+	25	P	Connection point for the OUT_A+ bootstrap capacitor which is used to create a power supply for the high-side gate drive for OUT_A+
OUT_A+	26	O	Positive pin for differential speaker amplifier output A+
PowerPAD		P	Connect to the system ground

Note: AI = Analog input, AO = Analog output, DI = Digital Input, DO = Digital Output, DI/O = Digital Bi-directional (input and output), P = Power, G = Ground (0V)

5. SPECIFICATIONS

5.1 ABSOLUTE MAXIMUM RATINGS

Table 3 lists the absolute maximum ratings of the AU6815 . Free-air room temperature 25°C, unless otherwise noted.

Table 3. Absolute Maximum Ratings

PARAMETER	DESCRIPTION	MIN	MAX	UNITS
Voltage	Low-voltage digital supply, DVDD	-0.3	3.9	V
	PVDD supply, PVDD	-0.3	32	
	DVDD referenced digital inputs ⁽²⁾ , V _{I(DigIn)}	-0.3	V _{DVDD} + 0.5	
	Voltage at speaker output pins, V _{I(SPK_OUTxx)}	-0.3	32	
Temperature	Ambient operating, T _A	-25	85	°C
	Storage, T _{stg}	-40	125	

Note 1: Stresses beyond those listed under Table 3 may cause permanent damage to the device. These are stress ratings only, which do not imply functional operation of the device at these or any other conditions beyond those indicated under Table 5. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

Note 2: DVDD referenced digital pins include: ADR/FAULT, LRCLK, SCLK, SCL, SDA, SDIN, and $\overline{\text{PDN}}$.

5.2 ESD RATINGS

Table 4 lists the ESD ratings of the AU6815 .

Table 4. ESD Ratings

PARAMETER	SYMBOL	DESCRIPTION	VALUE	UNITS
Electrostatic Discharge	V _(ESD)	Human-body model (HBM), per ANSI/ESDA/JEDEC JS-001 ⁽¹⁾	±2000	V
		Charged-device model (CDM), per JEDEC specification JESD22-C101 ⁽²⁾	±500	

Note 1: The JEDEC document JEP155 indicates that 500V HBM allows safe manufacturing with a standard ESD control process.

Note 2: The JEDEC document JEP157 indicates that 250V CDM allows safe manufacturing with a standard ESD control process.

5.3 RECOMMENDED OPERATING CONDITIONS

Table 5 lists the recommended operating conditions for the AU6815. Over operating free-air temperature range, unless otherwise noted.

Table 5. Recommended Operating Conditions

PARAMETER	SYMBOL	CONDITIONS	MIN	NOM	MAX	UNITS
Power Supply Inputs	$V_{(POWER)}$	DVDD	1.65		3.63	V
		PVDD	4.5		21	
Minimum Speaker Load	R_{SPK}	BTL Mode (4.5V ≤ PVDD ≤ 21V)	$V_{OUT_{PEAK}} / OCE_{THRES}$	3.2		Ω
Minimum Speaker Load	R_{SPK}	PBTL Mode (4.5V ≤ PVDD ≤ 21V)	$V_{OUT_{PEAK}} / (2 \times OCE_{THRES})$	1.6		Ω
Minimum Inductor Value in LC Filter under Short-Circuit Condition	L_{OUT}		1	4.7		μH

Note: The minimal speaker load is limited by OCE threshold. If output peak current < 5.5A, AU6815 also supports lower speaker load with high PVDD. For BTL, the OCE threshold is 5.5A (typical); For PBTL, the OCE threshold is 11A (typical). The minimal speaker load depends on the output peak voltage.

5.4 THERMAL INFORMATION

Table 6 lists the thermal information for the AU6815 .

Table 6. Thermal Information

PARAMETER	SYMBOL	TSSOP-28	UNITS
Junction-to-Ambient Thermal Resistance	$R_{\theta JA}$	30	°C/W
Junction-to-Case (Top) Thermal Resistance	$R_{\theta JC (top)}$	13	°C/W
Junction-to-Board Thermal Resistance	$R_{\theta JB}$	2	°C/W
Junction-to-Top Characterization Parameter	Ψ_{JT}	0.3	°C/W
Junction-to-Board Characterization Parameter	Ψ_{JB}	11	°C/W
Junction-to-Case (Bottom) Thermal Resistance	$R_{\theta JC (bot)}$	—	°C/W

5.5 ELECTRICAL CHARACTERISTICS

Table 7 lists the electrical characteristics of the AU6815. Free-air room temperature 25°C, unless otherwise noted.

Table 7. Electrical Characteristics

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNIT
DIGITAL I/O						
Input Logic High Current Level for DVDD Referenced Digital Input Pins	IIH	$V_{IL(Digin)} = V_{DVDD}$			5	μA
Input Logic Low Current Level for DVDD Referenced Digital Input Pins	IIL	$V_{IL(Digin)} = 0V$			-5	μA
Input Logic High Threshold for DVDD Referenced Digital Inputs	$V_{IH(Digin)}$		70%			V_{DVDD}
Input Logic Low Threshold for DVDD Referenced Digital Inputs	$V_{IL(Digin)}$				30%	V_{DVDD}
Output Logic High Voltage Level	$V_{OH(Digin)}$	$I_{OH} = 2mA$	80%			V_{DVDD}
Output Logic Low Voltage Level	$V_{OL(Digin)}$	$I_{OH} = -2mA$			20%	V_{DVDD}
I²C CONTROL PORT						
Allowable Load Capacitance for Each I ² C Line	$C_{L(I2C)}$				400	pF
Support SCL Frequency	$f_{SCL(fast)}$	No wait states, fast mode			400	kHz
Support SCL Frequency	$f_{SCL(slow)}$	No wait states, slow mode			100	kHz
SERIAL AUDIO PORT						
Required LRCLK/FS to SCLK Rising Edge Delay	t_{DLY}		5			ns
Allowable SCLK Duty Cycle	D_{SCLK}		40%		60%	
Supported Input Sample Rates	f_s		32		192	kHz
Supported SCLK Frequencies	f_{SCLK}		32		64	f_s
SCLK Frequency	f_{SCLK}				24.576	MHz
SPEAKER AMPLIFIER (ALL OUTPUT CONFIGURATIONS)						
Quiescent Supply Current on PVDD	I_{cc}	$\overline{PDN} = 2V$, $PVDD = 12V$, LC filter = $10\mu H + 0.68\mu F$, $F_{sw} = 768kHz$, BD modulation, Play mode		29		mA
Quiescent Supply Current on PVDD	I_{cc}	$\overline{PDN} = 2V$, $PVDD = 12V$, LC filter = $10\mu H + 0.68\mu F$, $F_{sw} = 768kHz$, 1SPW, Play mode		18		mA
Quiescent Supply Current on PVDD	I_{cc}	$\overline{PDN} = 2V$, $PVDD = 12V$, Output Hi-Z Mode		7		mA
Quiescent Supply Current on PVDD	I_{cc}	$\overline{PDN} = 2V$, $PVDD = 12V$, Sleep mode		2		mA
Quiescent Supply Current on PVDD	I_{cc}	$\overline{PDN} = 2V$, $PVDD = 12V$, Deep Sleep mode		4		μA
Quiescent Supply Current on DVDD	I_{cc}	$\overline{PDN}=2V$, $DVDD=3.3V$, Play mode and Hiz mode		16.5		mA
Quiescent Supply Current on DVDD	I_{cc}	$\overline{PDN}=2V$, $DVDD=3.3V$, Sleep mode and deep sleep mode		800		μA
Quiescent Supply Current on DVDD	I_{cc}	$\overline{PDN}=0V$, $DVDD=3.3V$, shut down mode		1.4		μA

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNIT
Turn-Off Time	t_{off}	Excluding volume ramp			10	ms
Programmable Gain	$A_{V(SPK_AMP)}$	Value represents the "peak voltage" disregarding clipping due to lower PVDD. Measured at 0dB input (1FS).	4.87		29.5	V
Amplifier Gain Error	$\Delta A_{V(SPK_AMP)}$	Gain = 26Vp/FS		0.5		dB
Switching Frequency of the Speaker Amplifier	f_{SPK_AMP}			260		kHz
				768		kHz
Drain-to-Source on Resistance of the Individual Output MOSFETs	$R_{DS(on)}$	FET + Metallization		110		mΩ
Over-Current Error Threshold	OCE_{THRES}	OUTxx overcurrent error threshold		5.5		A
PVDD Over Voltage Error Threshold	$OVE_{THRES(PVDD)}$			23		V
PVDD Under Voltage Error Threshold	$UVE_{THRES(PVDD)}$			4.2		V
Over Temperature Error Threshold	OTE_{THRES}			160		°C
Over Temperature Error Hysteresis	$OTE_{Hysteresis}$			10		°C
Over Temperature Warning Level 1	OTW_{THRES1}	Read by register 0x73 bit 3		146		°C
Over Temperature Warning Level 2	OTW_{THRES2}	Read by register 0x73 bit 2		135		°C
Over Temperature Warning Level 3	OTW_{THRES3}	Read by register 0x73 bit 1		125		°C
Over Temperature Warning Level 4	OTW_{THRES4}	Read by register 0x73 bit 0		113		°C

SPEAKER AMPLIFIER (STEREO BTL)

Amplifier Offset Voltage	$ V_{OS} $	Measured differentially with zero input data, programmable gain configured with 29.5Vp gain, $V_{PVDD} = 12V$, BD mode	-5		5	mV
Continuous Output Power (per Channel)	$P_{O(SPK)}$	$V_{PVDD} = 12V$, $R_{SPK} = 4\Omega$, $f = 1kHz$, THD + N = 1%		13.8		W
		$V_{PVDD} = 12V$, $R_{SPK} = 4\Omega$, $f = 1kHz$, THD + N = 10%		17		W
		$V_{PVDD} = 18V$, $R_{SPK} = 6\Omega$, $f = 1kHz$, THD + N = 1%		23.4		W
		$V_{PVDD} = 18V$, $R_{SPK} = 6\Omega$, $f = 1kHz$, THD + N = 10%		28		W
		$V_{PVDD} = 21V$, $R_{SPK} = 6\Omega$, $f = 1kHz$, THD + N = 1%		25		W
		$V_{PVDD} = 21V$, $R_{SPK} = 6\Omega$, $f = 1kHz$, THD + N = 10%		32		W
Total Harmonic Distortion and Noise ($P_O = 1W$, $f = 1kHz$, $R_{SPK} = 6\Omega$)	THD+N _{SPK}	$V_{PVDD} = 12V$, $F_{sw} = 768kHz$, $SPK_GAIN = 13.9Vp/FS$, LC-filter, BD mode		0.02		%
		$V_{PVDD} = 18V$, $F_{sw} = 768kHz$, $SPK_GAIN = 20.8Vp/FS$, LC-filter, BD mode		0.02%		%
Idle Channel Noise (A-Weighted)	$I_{CN(SPK)}$	$V_{PVDD} = 12V$, $F_{sw} = 768kHz$, LC-filter, Load = 6Ω		34		μV_{RMS}
		$V_{PVDD} = 18V$, $F_{sw} = 768kHz$, LC-filter, Load = 6Ω		38		
Dynamic Range	DR	A-Weighted, -60dBFS method. $PVDD = 24V$, $SPK_GAIN = 29.5Vp/FS$		114		dB

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNIT S
Signal-to-Noise Ratio	SNR	A-Weighted, referenced to 1% THD + N output level, PVDD = 12V		108		dB
Power Supply Rejection Ratio	K _{SVR}	Injected noise = 1kHz, 1V _{RMS} , PVDD = 12V, input audio signal = digital zero		109		dB
Crosstalk (Worst Case between Left-to-Right and Right-to-Left Coupling)	X-talk _{SPK}	f = 1kHz		92		dB

AMPLIFIER (MONO PBTL)

Total Harmonic Distortion and Noise (P _O = 1W, f = 1kHz)	THD+N _{SPK}	V _{PVDD} = 12V, SPK_GAIN = 16.5Vp/FS, 10μH + 0.68μF filter, R _{SPK} = 4Ω, BD mode		0.03%		
		V _{PVDD} = 24V, SPK_GAIN = 29.5Vp/FS, 10μH + 0.68μF filter, R _{SPK} = 4Ω, 1SPW mode		0.04%		
Signal-to-Noise Ratio	SNR	A-weighted, referenced to 1% THD + N output level, PVDD = 12V		114		dB
Power Supply Rejection Ratio	K _{SVR}	Injected noise = 1kHz, 1V _{RMS} , PVDD = 19V, input audio signal = digital zero		75		dB

5.6 TIMING REQUIREMENTS

Table 8 lists the timing.

Table 8. Timing

PARAMETER	SYMBOL	MIN	NOM	MAX	UNITS
SERIAL AUDIO PORT TIMING					
SCLK Frequency	f_{SCLK}	1.024			MHz
SCLK Period	t_{SCLK}	40			ns
SCLK Pulse Width, Low	t_{SCLKL}	16			ns
SCLK Pulse Width, High	t_{SCLKH}	16			ns
SCLK Rising to LRCK/FS Edge	t_{SL}	8			ns
LRCK/FS Edge to SCLK Rising Edge	t_{LS}	8			ns
Data Setup Time, Before SCLK Rising Edge	t_{SU}	8			ns
Data Hold Time, After SCLK Rising Edge	t_{DH}	8			ns
Data Delay Time from SCLK Falling Edge	t_{DFS}			18	ns
I²C BUS TIMING – STANDARD					
SCL Clock Frequency	f_{SCL}			100	kHz
Bus Free Time Between A STOP and START Condition	t_{BUF}	4.7			μs
Low Period of the SCL Clock	t_{LOW}	4.7			μs
High Period of the SCL Clock	t_{HI}	4			μs
Setup Time for (Repeated) START Condition	$t_{\text{RS-SU}}$	4.7			μs
Hold Time for (Repeated) START Condition	$t_{\text{S-HD}}$	4			μs
Data Setup Time	$t_{\text{D-SU}}$	250			ns
Data Hold Time	$t_{\text{D-HD}}$	0		3450	ns
Rise Time of SCL Signal	$t_{\text{SCL-R}}$	$20 + 0.1C_B$		1000	ns
Rise Time of SCL Signal After A Repeated START Condition and After An Acknowledge Bit	$t_{\text{SCL-R1}}$	$20 + 0.1C_B$		1000	ns
Fall Time of SCL Signal	$t_{\text{SCL-F}}$	$20 + 0.1C_B$		1000	ns
Rise Time of SDA Signal	$t_{\text{SDA-R}}$	$20 + 0.1C_B$		1000	ns
Fall Time of SDA Signal	$t_{\text{SDA-F}}$	$20 + 0.1C_B$		1000	ns
Setup Time for STOP Condition	$t_{\text{P-SU}}$	4			μs
Capacitive Load for Each Bus Line	C_B			400	pF
I²C BUS TIMING – FAST					
SCL Clock Frequency	f_{SCL}			400	kHz
Bus Free Time Between A STOP and START Condition	t_{BUF}	1.3			μs
Low Period of the SCL Clock	t_{LOW}	1.3			μs
High Period of the SCL Clock	t_{HI}	600			ns
Setup Time for (Repeated) START Condition	$t_{\text{RS-SU}}$	600			ns
Hold Time for (Repeated) START Condition	$t_{\text{RS-HD}}$	600			ns
Data Setup Time	$t_{\text{D-SU}}$	100			ns
Data Hold Time	$t_{\text{D-HD}}$	0		900	ns
Rise Time of SCL Signal	$t_{\text{SCL-R}}$	$20 + 0.1C_B$		300	ns
Rise Time of SCL Signal After A Repeated START Condition and After An Acknowledge Bit	$t_{\text{SCL-R1}}$	$20 + 0.1C_B$		300	ns
Fall Time of SCL Signal	$t_{\text{SCL-F}}$	$20 + 0.1C_B$		300	ns
Rise Time of SDA Signal	$t_{\text{SDA-R}}$	$20 + 0.1C_B$		300	ns
Fall Time of SDA Signal	$t_{\text{SDA-F}}$	$20 + 0.1C_B$		300	ns
Setup Time for STOP Condition	$t_{\text{P-SU}}$	600			ns
Pulse Width of Spike Suppressed	t_{SP}			50	ns
Capacitive Load for Each Bus Line	C_B			400	pF

6. TYPICAL CHARACTERISTICS

Free-air room temperature 25°C (unless otherwise noted). Measurements were made using AU6815 EVM board and Audio Precision System 2722 with Analog Analyzer filter set to 20kHz brickwall filter. All measurements were taken with audio frequency set to 1kHz unless otherwise noted.

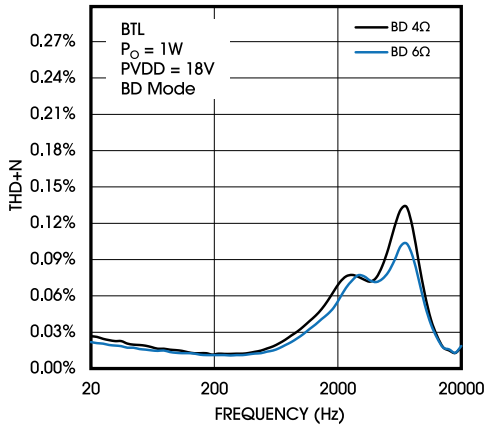


Figure 7. THD+N vs. Frequency (BTL)

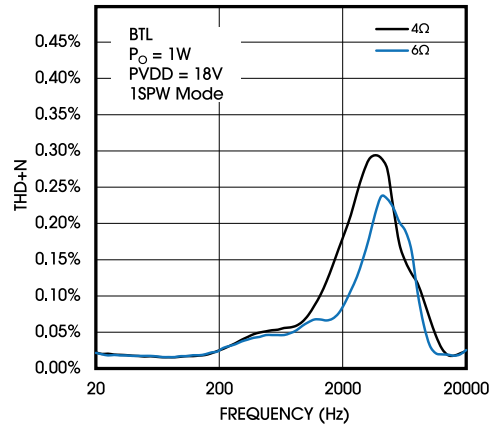


Figure 8. THD+N vs. Frequency (BTL)

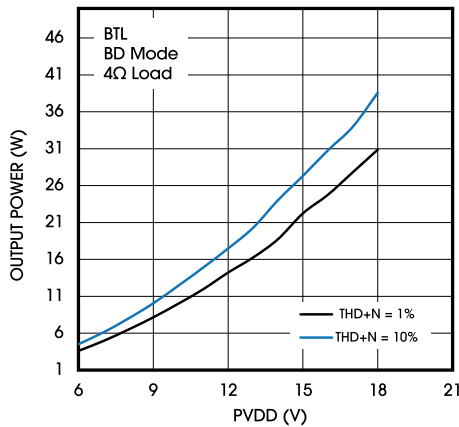


Figure 9. Output Power vs. Supply Voltage (BTL)

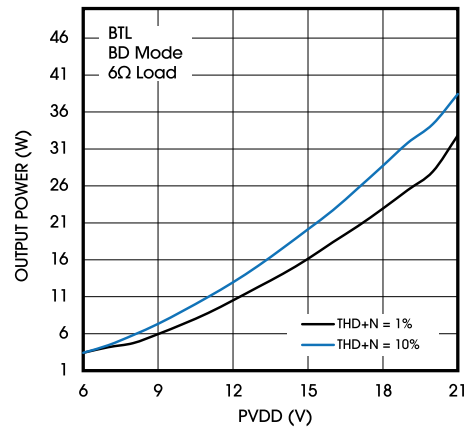


Figure 10. Output Power vs. Supply Voltage (BTL)

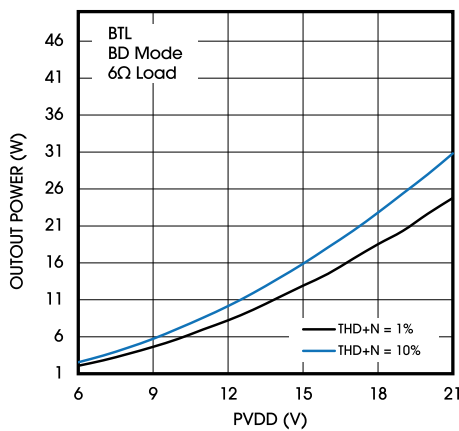


Figure 11. Output Power vs. Supply Voltage (BTL)

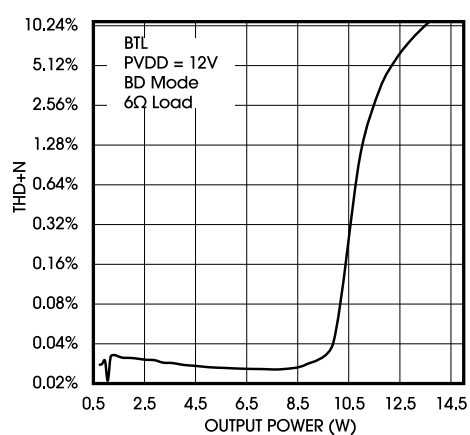


Figure 12. THD+N vs. Output Power (BTL)

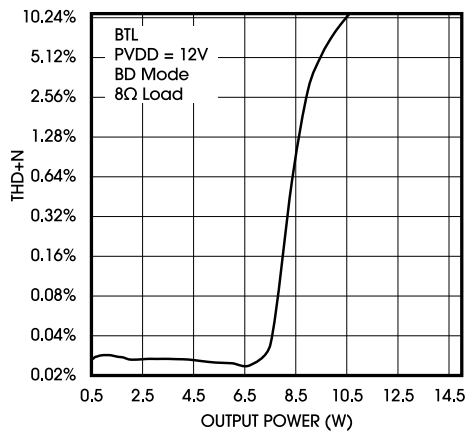


Figure 7. THD+N vs. Output Power (BTL)

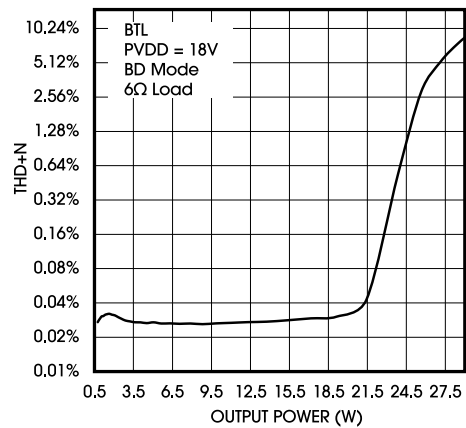


Figure 8. THD+N vs. Output Power (BTL)

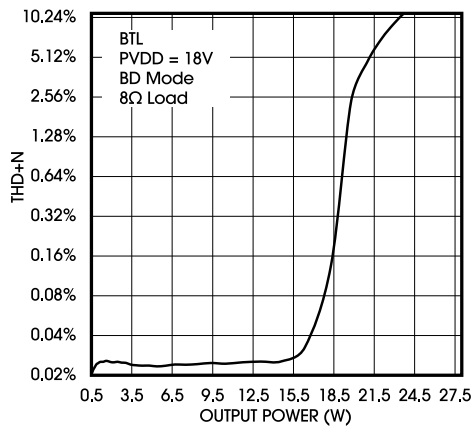


Figure 9. THD+N vs. Output Power (BTL)

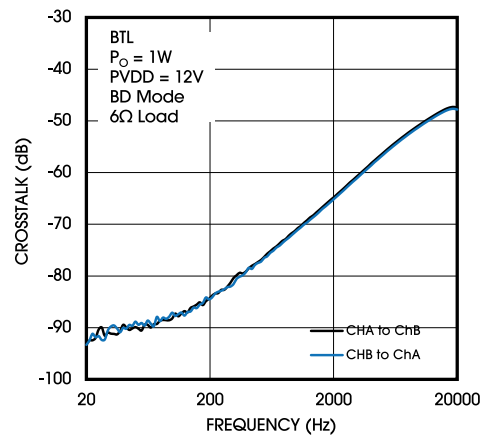


Figure 10. Crosstalk (BTL)

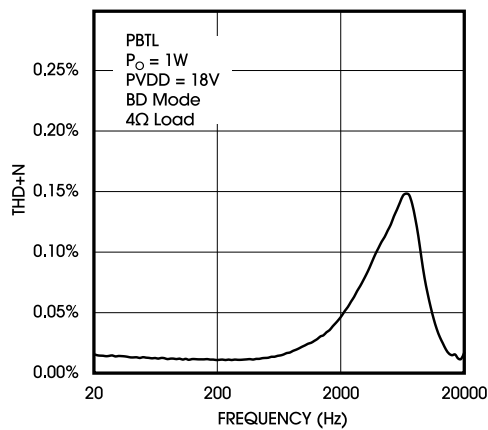


Figure 11. THD+N vs. Frequency (PBTL)

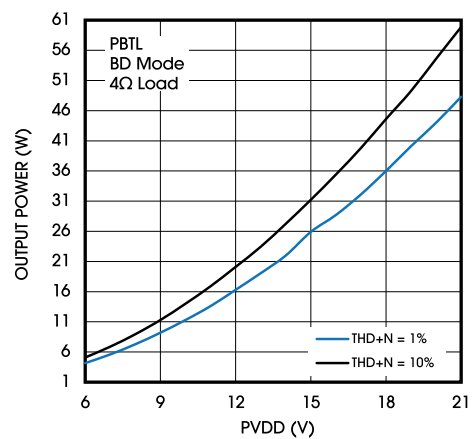


Figure 12. Output Power vs. Supply Voltage (PBTL)

7. PARAMETER MEASUREMENT INFORMATION

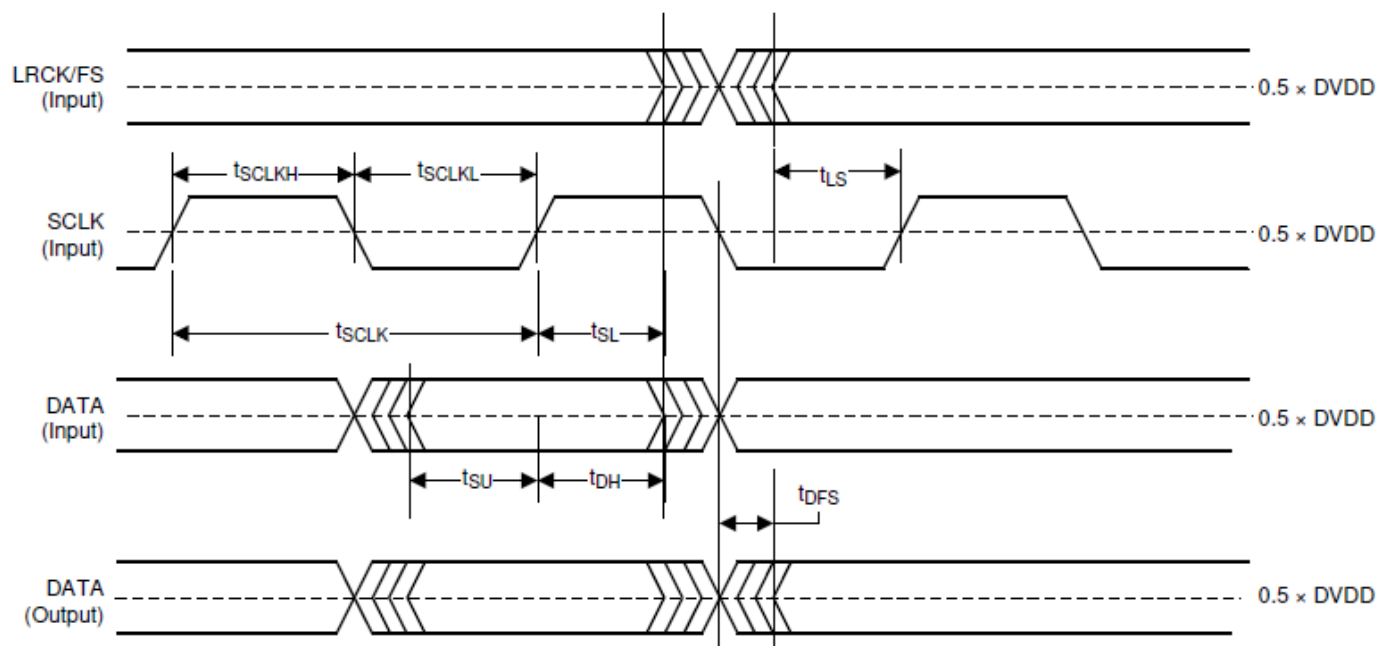


Figure 2. Serial Audio Port Timing in Slave Mode

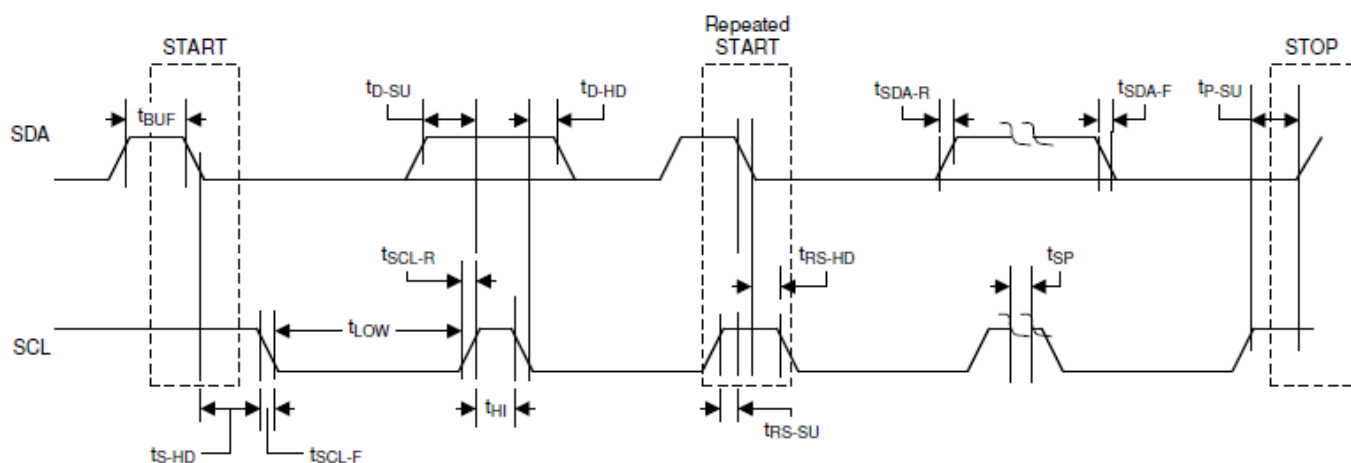


Figure 3. I²C Communication Port Timing Diagram

8. 详细描述

8.1 概述

AU6815 主要由 5 个部分组成，包括：

- 一个立体声 DAC
- 32bit 高精度音频 DSP
- 闭环架构的 Class D
- I2C 控制接口
- 保护逻辑和内部 ADC 电压温度采样模块

PVDD 供电电压范围为 4.5V 到 21V, DVDD 支持 3.3V 或者 1.8V 逻辑。此外 AU6815 提供两个 GPIO, 可以配置成回声消除或者其他 GPIO 功能，例如 fault。此外 AU6815 支持 32k-192k 输入采样率。

8.2 功能模块框图

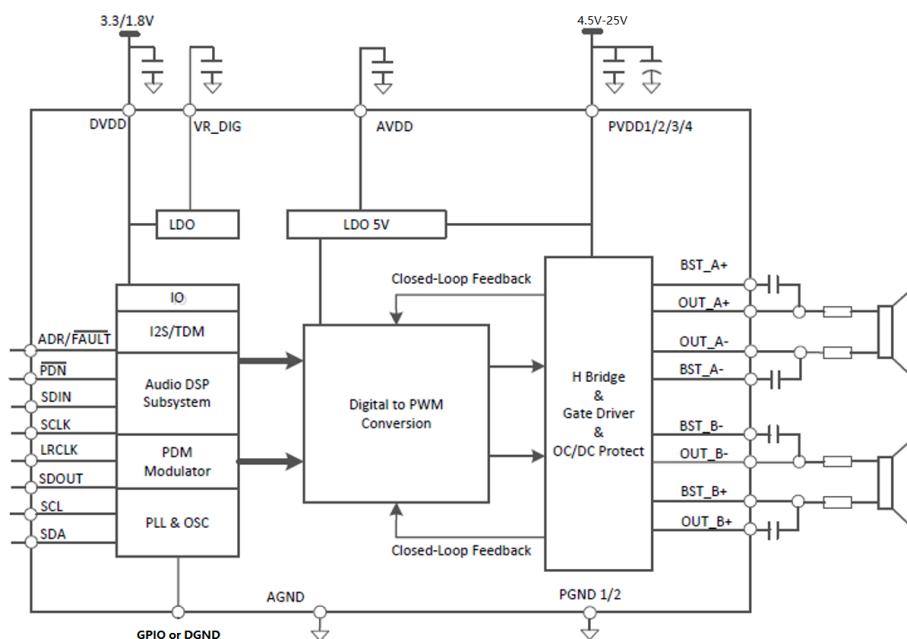


Figure 4. Functional Block Diagram

8.3 特性说明

8.3.1 串行音频接口及频率

AU6815 支持的音频输入数据格式和频率配置如下表所示：

Table 9. Audio Data Formats, Bit Depths, and Clock Rates

FORMAT	DATA BITS	MAXIMUM LRCLK/FS FREQUENCY (kHz)	SCLK RATE (f _s)
I ² S/LJ/RJ	32, 24, 20, 16	32 to 192	64, 32
TDM	32, 24, 20, 16	32	128
		44.1, 48	128, 256, 512
		96	128, 256
		192	128

8.3.2 时钟停止及恢复

AU6815 支持时钟频率停止后自动进入 Hiz 或者其他低功耗模式，时钟恢复后可以自动恢复。

8.3.3 在线改变采样率

AU6815 支持在线编辑 EQ 等参数，此外还支持自动切换采样率功能。通常情况为了避免 pop 音，建议进入 Hiz 或者 sleep 等状态后再进行采样率切换。

8.3.4 串行音频接口-数据格式和有效位

AU6815 支持如下 I2S 格式：


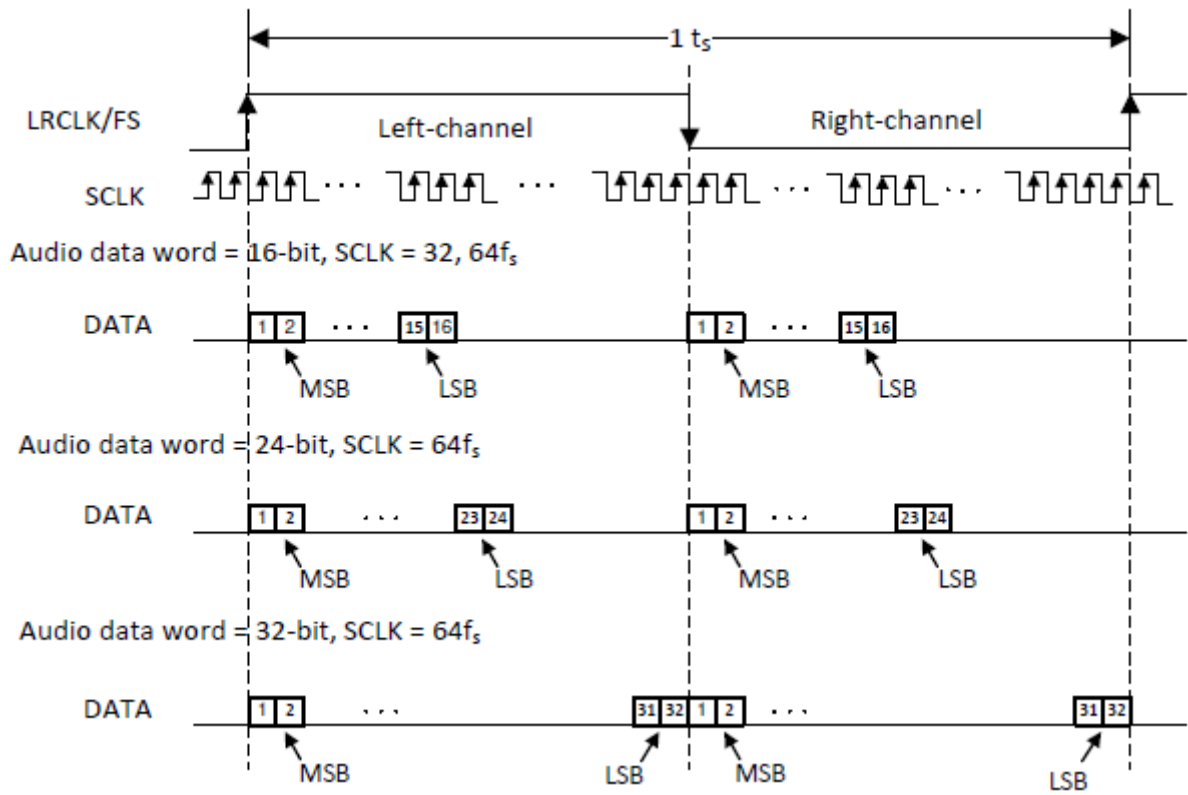



Figure 5. Left-Justified Audio Data Format

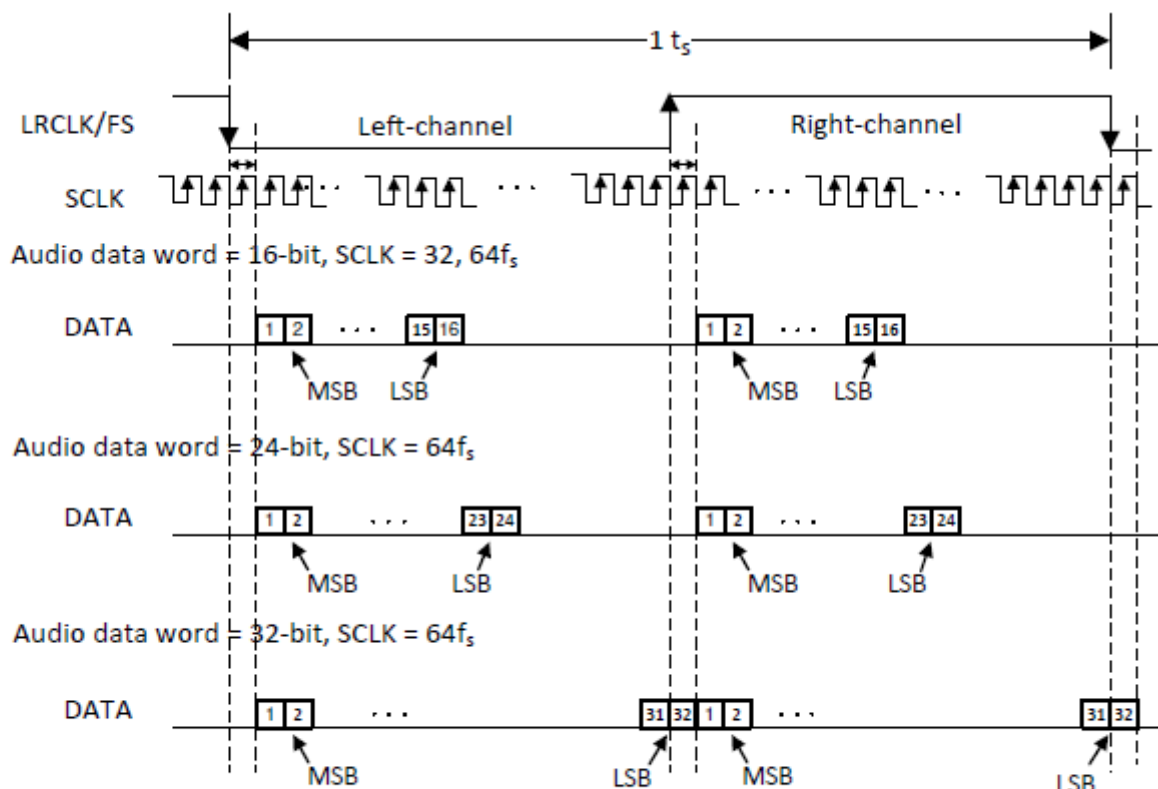

I²S Data Format; L-channel = LOW, R-channel = HIGH

I²S Data Format; L-channel = LOW, R-channel = HIGH


Figure 6. I²S Audio Data Format

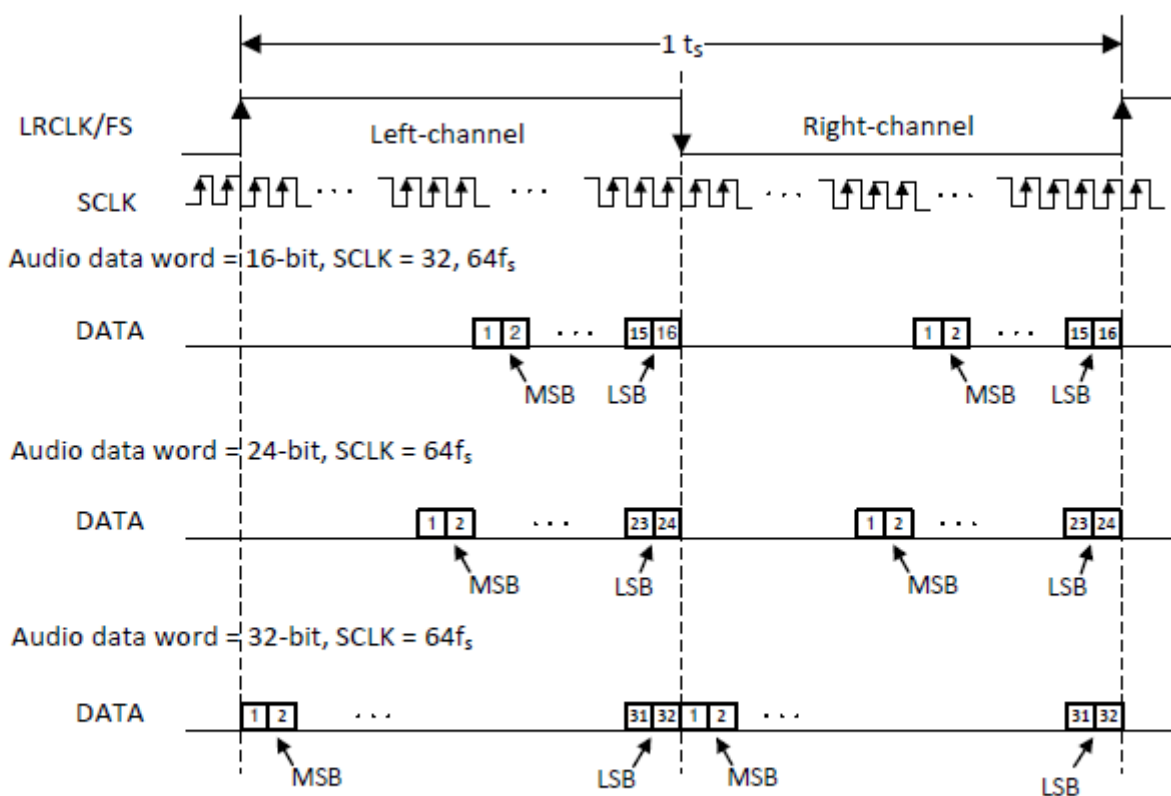

Right-Justified Data Format; L-channel = HIGH, R-channel = LOW

Right-Justified Data Format; L-channel = HIGH, R-channel = LOW


Figure 7. Right-Justified Audio Data Format

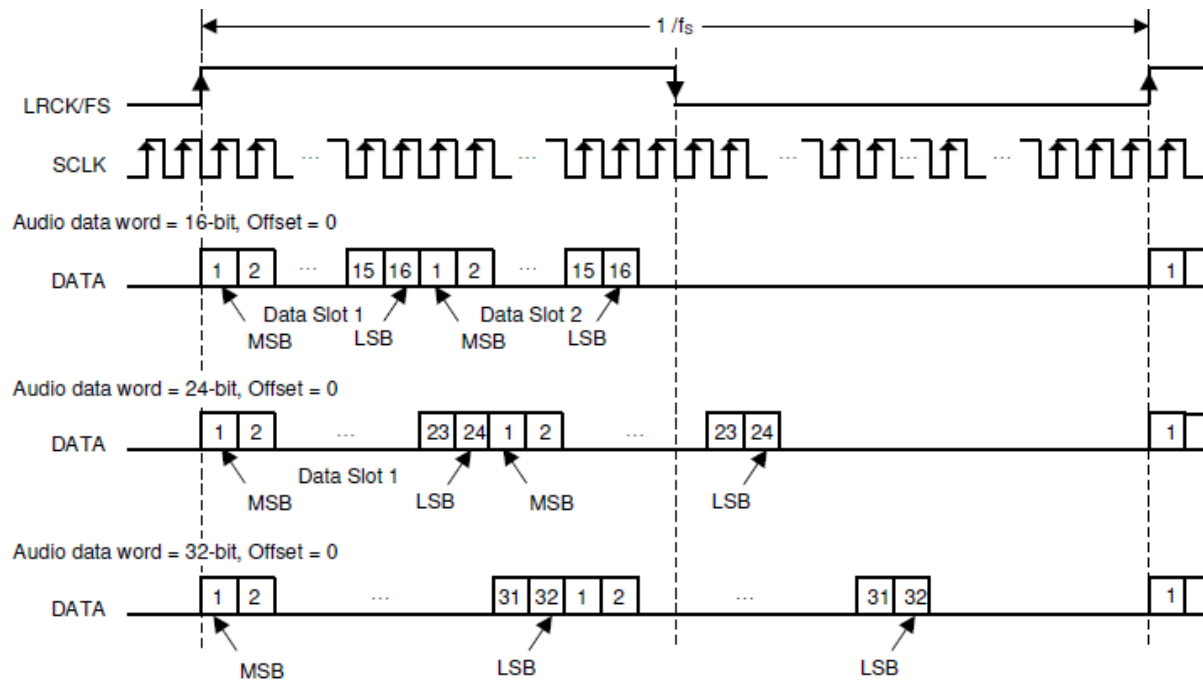

TDM Data Format with OFFSET = 0

In TDM Modes, Duty Cycle of LRCK/FS should be 1x SCLK at minimum. Rising edge is considered frame start.

Figure 8. TDM 1 Audio Data Format

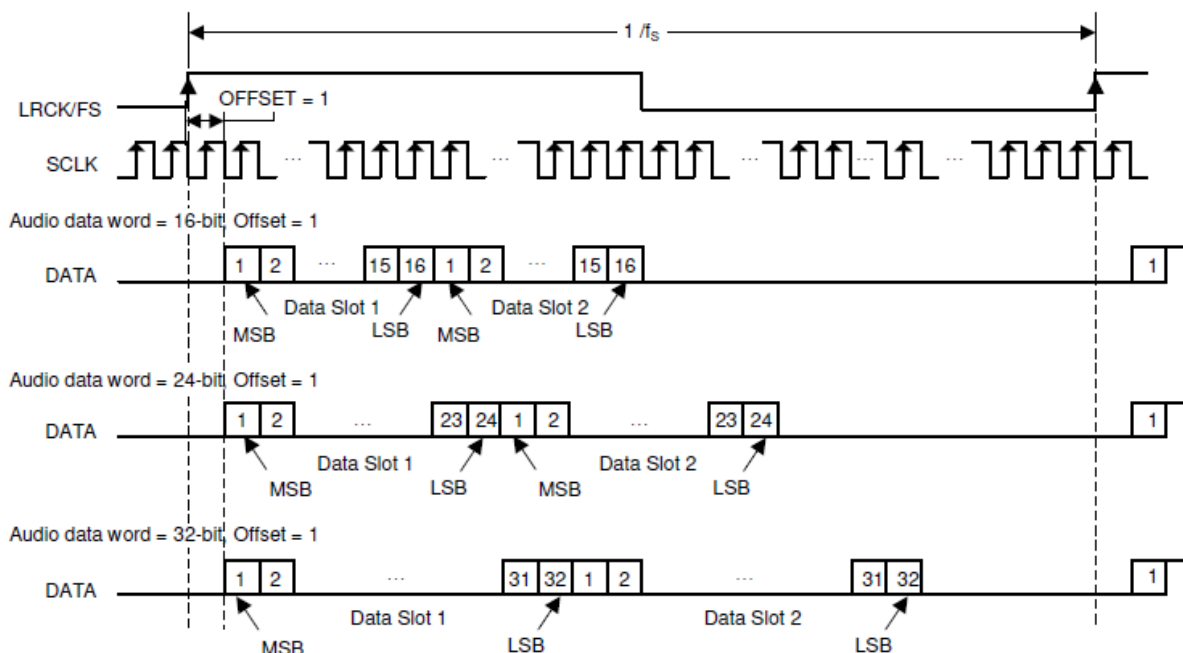

TDM Data Format with OFFSET = 1

In TDM Modes, Duty Cycle of LRCK/FS should be 1x SCLK at minimum. Rising edge is considered frame start.

Figure 9. TDM 2 Audio Data Format

8.3.5 数字音频处理

AU6815 DSP 支持多种音频处理的算法结构，配置上包括立体声 2.0， 高低音 1.1 或者 2.1 或者 2.2 模式。

1. 简单模式: SRC + 2*15*EQ + 1-band DRC + AGL
2. 标准模式: SRC + 2*15 EQs + 3-band DRC + AGL + 3 post-EQ
3. 高阶模式: SRC + 2*15 EQs + DPEQ + 3-band DRC + AGL + 3 Post-EQ

类比半导体提供一站式调音平台，该平台可以直接产生配置脚本。

8.3.6 功放增益选择

如下图，基本结果如下图所示：

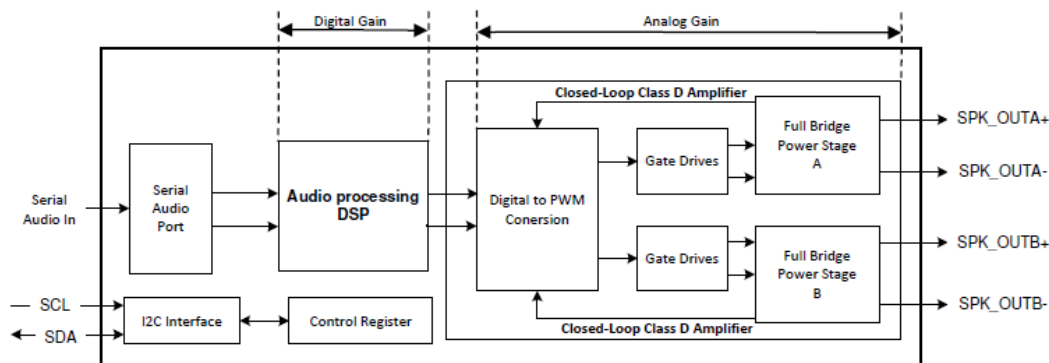


Figure 10. Speaker Amplifier Gain

配置增益主要通过模拟的增益，即寄存器 0x54, Book 0, page0。其对应的输出 peak 值如下表所示。此外 DSP 部分也可以配置增益，但是该增益收到 AGL DRC 的门限限制。

Table 10. Analog Gain Setting

AGAIN(4: 0)	GAIN (dBFS)	AMPLIFIER PEAK OUTPUT VOLTAGE (V)
00000	0	29.5
00001	-0.5	27.85
.....		
11111	-15.5	4.95

8.4 DEVICE FUNCTIONAL MODES

8.4.1 SOFTWARE CONTROL

The AU6815 通过 I2C 通信接口进行配置，最高支持 400kHz I2C。详情请参考对应的章节：I2C COMMUNICATION PORT

- BTL mode
- PBTL mode

8.4.1.1 BTL MODE

在 BTL 模式下，输出两路独立，分别为左声道输出和右声道输出。在信号链上看，这两路从输入，DSP 算法处理，输出都支持独立配置。AU6815 并且可以支持单独关闭一个通道，但是另外一个通道可以正常工作。

8.4.1.2 PBTL MODE

AU6815 还可以支持 PBTL 模式，PBTL 顾名思义，就是两个 BTL 模式进行并联。在该模式下，输出功率，输出最大电流都可以翻倍，电路图上支持电感前并联或者电感后的并联，这个取决于设计峰值电流和电感饱和电流以及成本之间的平衡。通常在驱动大功率低音炮时，经常会选择 PBTL 模式。在该模式下，信号链上通常默认选择左声道为 PBTL 输出。

8.4.2 芯片状态控制

AU6815 主要有 5 种模式：

- Shutdown mode: $\overline{\text{PDN}}$ 拉低后内部 LDO 都会关闭，此时功耗最低。
- Deep Sleep mode: 深度睡眠模式下，I2C 通讯可以正常，数字核的供电也正常，模拟部分 LDO 关闭，DSP 处于活动状态。
- Sleep mode. 该模式下，I2C 模块，数字核，DSP 和 deep sleep 模式一样正常工作，此外模拟部分 5V Analog LDO 会正常工作。
- Output Hi-Z mode: 除了输出 power stage 外，都处于 active 状态。
- Play mode. When register 0x03h-D(1:0) = 11, device stays in Play mode.

8.4.3 芯片调制模式

8.4.3.1 BD 工作模式：

AU6815 支持 BD 模式，单边工作模式。

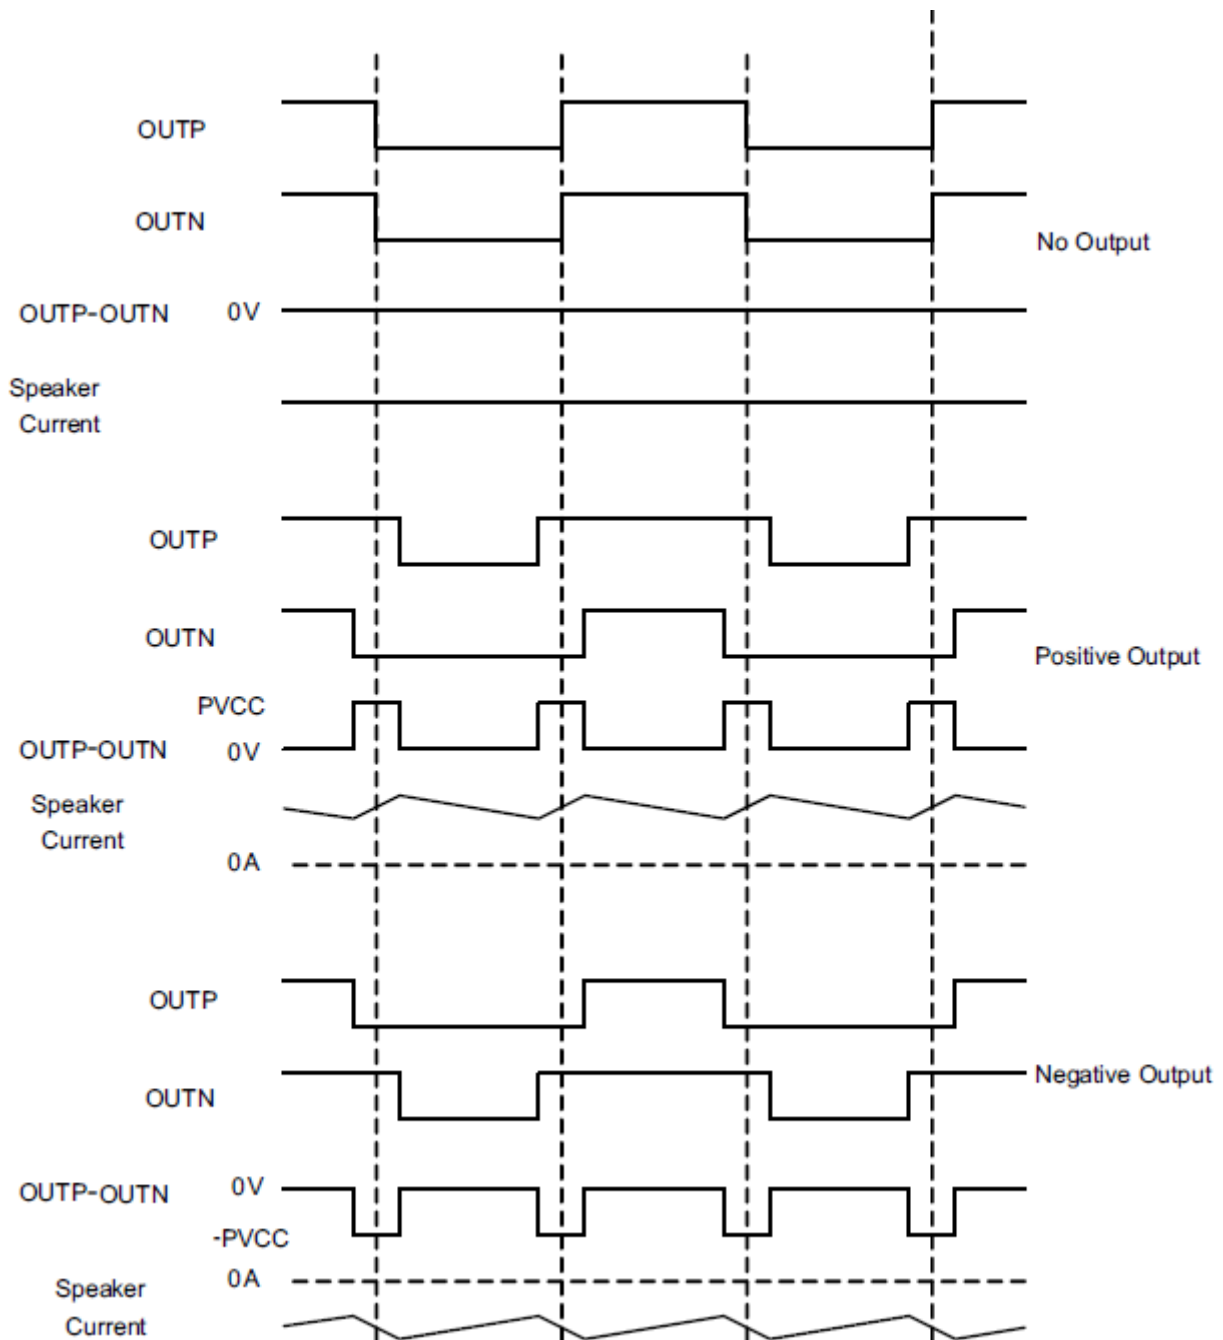


Figure 11. BD Mode Modulation

8.4.3.2 1SPW MODULATION

单边工作模式 1SPW:

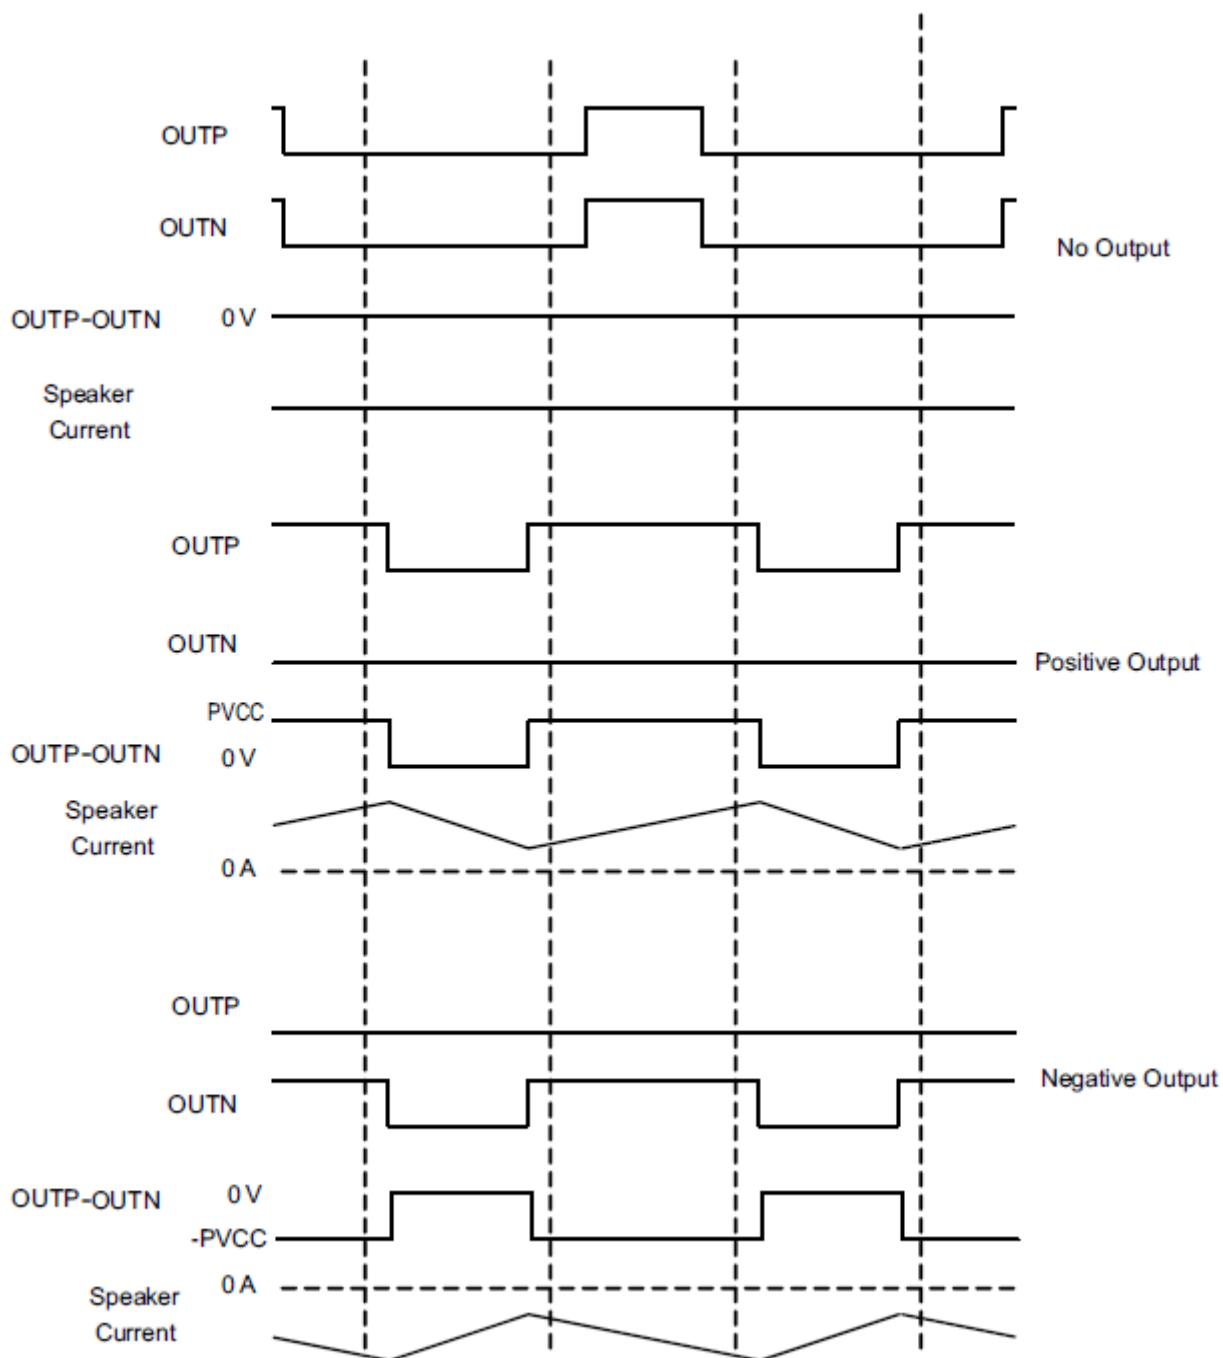


Figure 12. 1SPW Mode Modulation

8.5 编程和控制

8.5.1 I²C SERIAL COMMUNICATION BUS

AU6815 支持标准或者 fast I2C，标称寻址方式分为 book，page 和 register 的架构。

8.6 从机地址

从机地址通过 ADR 管脚进行配置，具体包括：

Table 11. I²C Slave Address Configuration

ADR PIN CONFIGURATION	MSB					USER-DEFINED		LSB
4.7kΩ to DVDD	0	1	0	1	1	0	0	R/ $\overline{W}$
15kΩ to DVDD	0	1	0	1	1	0	1	R/ $\overline{W}$
47kΩ to DVDD	0	1	0	1	1	1	0	R/ $\overline{W}$
120kΩ to DVDD	0	1	0	1	1	1	1	R/ $\overline{W}$

8.6.1.1 随机写入

随机写入格式如下：

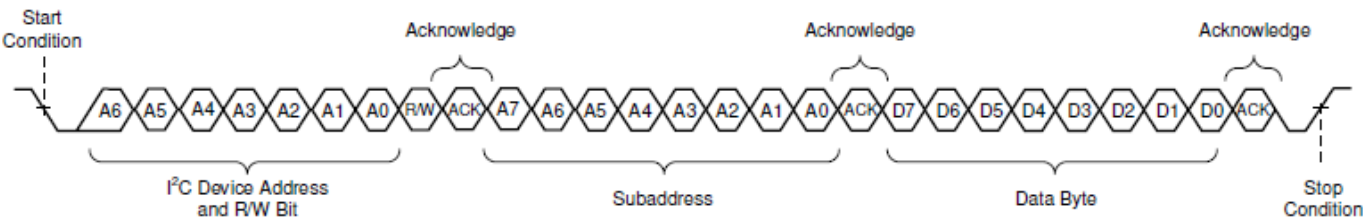


Figure 13. Random Write Transfer

8.6.1.2 顺序写入

顺序写入格式如下：

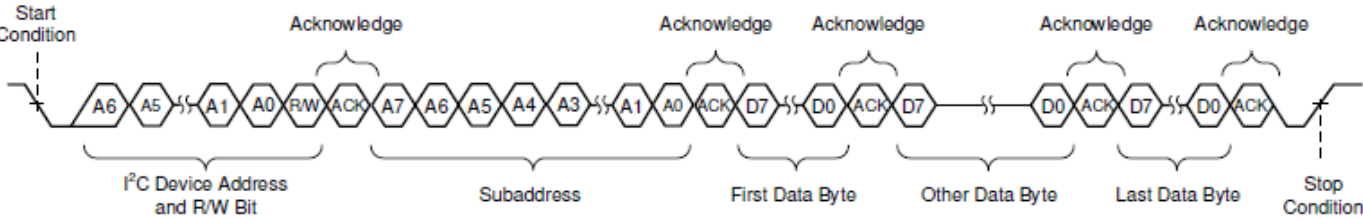


Figure 14. Sequential Write Transfer

8.6.1.3 随机读取

随机读取如下：

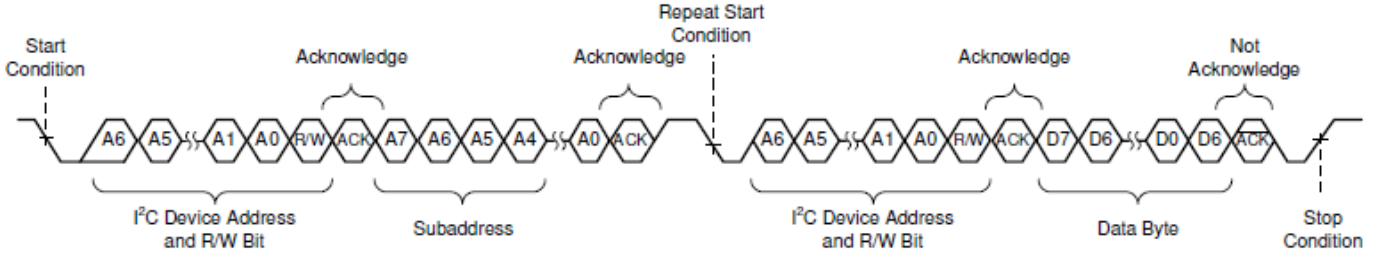


Figure 15. Random Read Transfer

8.6.1.4 顺序读取

顺序读取时序如下：

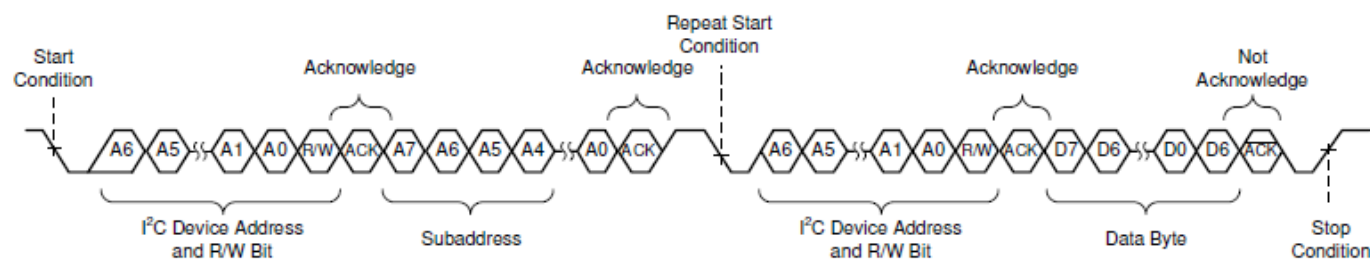


Figure 16. Sequential Read Transfer

8.6.1.5 内存空间结构及参数更新

AU6815 book 操作通过 0x7f 进入相应的 book, 0x00 进入相应的 page, 每次切换 book, 需要先进入 page0。每次新进入一个 book, 默认就处于 page0。

8.6.2 软件控制

8.6.2.1 上电时序

1. 配置 ADR/ $\overline{\text{FAULT}}$ 设置 I²C 地址。
2. 建议先 DVDD 再上 PVDD, 时间提前量 1ms 即可;
3. 拉高 PDN
4. I²C 进入 play 之前的所有配置, 并且中间无需等待时间, 且不需要 I2S 时钟存在。
5. 进入 play 之前提供 I2S。然后进入 play 模式即可

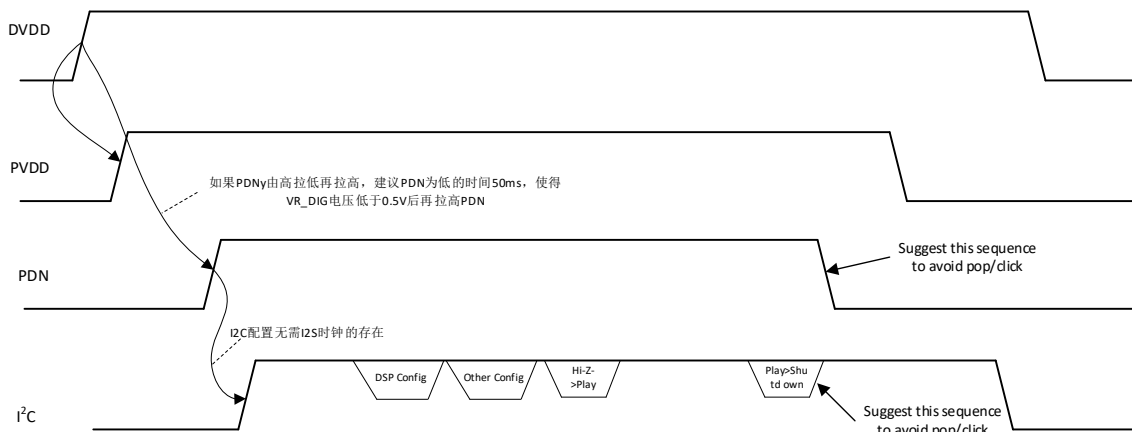


Figure 17. Start-up and Power-down Sequence

8.6.2.2 下电时序

1. 芯片正常工作。
2. 配置寄存器使得芯片进入 HiZ 或以下的状态, 然后拉低 PDN。
3. 等待 10ms
4. 拉低 PVDD, 然后拉低 DVDD;
5. 芯片处于下电状态

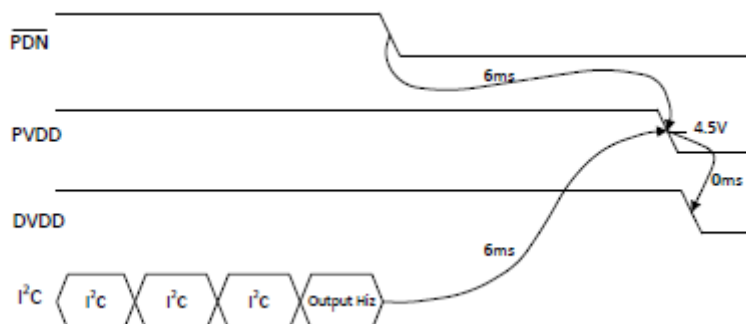


Figure 18. Power-Down Sequence

在 PVDD 和 DVDD 掉电之前, 建议提前至少 6ms 软件关闭输出, 比如进入 HiZ 模式, 然后拉低 PDN, 这样可以有效的避免掉电 pop 音。

8.6.2.3 保护和监测

8.6.2.3.1 OVERCURRENT SHUTDOWN (OCSO)

Under severe short-circuit event, such as a short to PVDD or ground, the device uses a peak-current detector, and the affected channel shuts down in < 100ns if the peak current is big enough. The shutdown speed depends on a number of factors, such as the impedance of the short circuit, supply voltage, and switching frequency. The user may restart the affected channel via I²C. An OCSO event activates the fault pin, and the I²C fault register saves a record. If the supply or ground short is strong enough to exceed the peak current threshold but not severe enough to trigger the OSCD, the peak current limiter prevents excess current from damaging the output FETs, and operation returns to normal after the short is removed.

8.6.2.3.2 SPEAKER DC PROTECTION

If the device measures a > 1.9V (Typical) DC offset and continues more than 600ms (typical) on the output stage, the ADR/FAULT line will be pulled low and set the OUTxx outputs to Hi-Z state to protect speaker, signifying a fault in register 0x70 in Book0/Page0. This fault report bit in register 0x70 keeps 1 and device keeps in Hi-Z mode unless it is cleared by register 0x78 in Book0/Page0 manually.

8.6.2.3.3 DEVICE OVER TEMPERATURE PROTECTION

Once the die temperature exceeds 160°C (Typical), device will set the output driver from Play mode to Hi-Z mode. Over temperature shutdown fault is reported by register 0x72 in Book0/Page0. Set this faults behavior to Auto-Recovery mode, device will come back to Play mode automatically once the die temperature drops down to 150°C or device needs re-enter into Play mode by clearing fault with register 0x78 in Book0/Page0.

8.6.2.3.4 DEVICE OVER VOLTAGE/UNDER VOLTAGE PROTECTION

8.6.2.3.4.1 OVER VOLTAGE PROTECTION

Once the PVDD voltage exceeds the $OVE_{THRES}(PVDD)$ (28.1V Typical), device will set the output driver from Play mode to Hi-Z mode, and over voltage fault is reported by register 0x71 in Book0/Page0. Once PVDD drops below 27.5V (Typical), device will come back to Play mode. But this bit still keeps 1 unless cleared by register 0x78 in Book0/Page0 manually.

8.6.2.3.4.2 UNDER VOLTAGE PROTECTION

Once the PVDD voltage drops below the $UVE_{THRES}(PVDD)$ (4V Typical), device will set the output driver from Play mode to Hi-Z mode, and under voltage fault is reported by register 0x71 in Book0/Page0. Once PVDD rises above 4.25V (Typical), device will come back to Play mode. But this bit still keeps 1 unless cleared by register 0x0D in Book0/Page0 manually.

8.6.2.3.5 CLOCK FAULT

如果发生 Clock Halt, SCLK/LRCLK Ratio Error, PLL unlock, FS error, register 0x37 和 register 0x39 会实时监测, 此时芯片可以通过寄存器配置进入 hiz 或者 sleep 模式, 从而实现低功耗。Clock fault 可以在寄存器 0x71 中读取。

9. REGISTER MAP

9.1.1 CONTROL PORT REGISTERS

Table 12 lists the memory-mapped registers for the CONTROL PORT. All register offset addresses not listed in Table 12 should be considered as reserved locations and the register contents should not be modified.

Table 12. CONTROL PORT Registers

OFFSET	ACRONYM	REGISTER NAME
1h	RESET_CTRL	Register 1
2h	DEVICE_CTRL_1	Register 2
3h	DEVICE_CTRL_2	Register 3
Dh	RESET_CTRL_2	Register 13
Fh	I2C_PAGE_AUTO_INC	Register 15
28h	SIG_CH_CTRL	Register 40
29h	CLOCK_DET_CTRL	Register 41
30h	SDOUT_SEL	Register 48
31h	I2S_CTRL	Register 49
33h	SAP_CTRL1	Register 51
34h	SAP_CTRL2	Register 52
35h	SAP_CTRL3	Register 53
37h	FS_MON	Register 55
38h	BCK_MON	Register 56
39h	CLKDET_STATUS	Register 57
4Ch	DIG_VOL_CTRL	Register 76
4Eh	DIG_VOL_CTRL2	Register 78
4Fh	DIG_VOL_CTRL3	Register 79
53h	ANA_CTRL	Register 83
54h	AGAIN	Register 84
5Ch	BQ_WR_CTRL1	Register 92
62h	GPIO0	Register 98
63h	GPIO1	Register 99
64h	GPIO2	Register 100
67h	Die ID	Register 105
6Ah	PHASE_CTRL	Register 108
6Bh	SS_CTRL0	Register 107
6Ch	SS_CTRL1	Register 108
6Dh	SS_CTRL2	Register 109
6Eh	SS_CTRL3	Register 110
6Fh	SS_CTRL4	Register 111
70h	CHAN_FAULT	Register 112
71h	GLOBAL_FAULT1	Register 113
72h	GLOBAL_FAULT2	Register 114
73h	OT WARNING	Register 115
74h	PIN_CONTROL1	Register 116
75h	PIN_CONTROL2	Register 117
76h	MISC_CONTROL	Register 118

Complex bit access types are encoded to fit into small table cells. Table 13 shows the codes that are used for access types in this section.

Table 13. CONTROL PORT Access Type Codes

ACCESS TYPE	CODE	DESCRIPTION
-------------	------	-------------

READ TYPE

R	R	Read
---	---	------

WRITE TYPE

W	W	Write
---	---	-------

RESETOR DEFAULT VALUE

-n		Value after reset or the default value
----	--	--

9.1.1.1 RESET_CTRL REGISTER (OFFSET = 1H) [RESET = 0X00]

Return to [SUMMARY TABLE](#).

Table 14. RESET_CTRL Register

7	6	5	4	3	2	1	0
RESERVED			RST_MOD	RESERVED			RST_REG
R/W			W	R			W

Table 15. RESET_CTRL Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:5	RESERVED	R/W	000	Reserved
4	RST_MOD	W	0	WRITE CLEAR BIT Reset Modules This bit resets the interpolation filter and the DAC modules. Since the DSP is also reset, the coefficient RAM content will also be cleared by the DSP. This bit is auto cleared and can be set only in hiz mode. 0: Normal 1: Reset modules
3:1	RESERVED	R	000	Reserved
0	RST_REG	W	0	Write clear bit Reset Registers This bit resets the mode registers back to their initial values. The RAM content is not cleared. This bit is auto cleared and must be set only when the DAC is in hiz mode (resetting registers when the DAC is running is prohibited and not supported). 0: Normal 1: Reset mode registers"

9.1.1.2 DEVICE_CTRL_1 REGISTER (OFFSET = 2H) [RESET = 0X00]

Return to [SUMMARY TABLE](#).

Table 16. DEVICE_CTRL_1 Register

7	6	5	4	3	2	1	0
Reserved	FSW_SEL			RESERVED	MP_PBTL	DAMP_MOD	
R/W	R/W			R/W	R/W	R/W	

Table 17. DEVICE_CTRL_1 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7	Reserved	R/W	0	Reserved
6:4	FSW_SEL	R/W	000	select fsw (kHz): 0: 260 1: 310 2: 384 3: 480 4: 576 5: 768 others: reserved
3	RESERVED	R/W	0	Reserved
2	DAMP_PBTL	R/W	0	0: Set DAMP to BTL mode 1: Set DAMP to PBTL mode
1:0	DAMP_MOD	R/W	00	00: BD mode 01: 1SPW mode Others: reserved

9.1.1.3 DEVICE_CTRL_2 REGISTER (OFFSET = 3H) [RESET = 0X10]Return to [SUMMARY TABLE](#).

Table 18. DEVICE_CTRL_2 Register

7	6	5	4	3	2	1	0
RESERVED	DEEPSLEEP_ON_CLKF	MANUAL_MODE	DIS_DSP	MUTE	RESERVED	CTRL_STATE	
R/W	R/W	R/W	R/W	R/W	R/W	R/W	

Table 19. DEVICE_CTRL_2 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7	RESERVED	R/W		Reserved
6	DEEPSLEEP_ON_CLKF	R/W	0	Power state goes to DEEPSLEEP mode when I2S clock fault happens
5	RESERVED	R/W	0	Reserved
4	DIS_DSP	R/W	1	DSP reset 0: Normal operation 1: Reset the DSP
3	MUTE	R/W	0	Mute left/right channel This bit issues soft mute request for the left/right channel. The volume will be smoothly ramped down/up to avoid pop/click noise. 0: Normal volume 1: Mute
2	RESERVED	R/W	0	Reserved
1:0	CTRL_STATE	R/W	00	Device state control register 00: Deep Sleep 01: Sleep 10: Hi-Z 11: Play

9.1.1.4 POWER STATE REPORT (OFFSET = 4H) [RESET = 0X00]Return to [SUMMARY TABLE](#).

Table 20. Power State Report Register

7	6	5	4	3	2	1	0
RESERVED						Power State Report	
R/W	R/W	R/W	R/W	R/W	R/W	R	

Table 21. Power State Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:2	RESERVED	R/W	0	Reserved.
1:0	Power State Report	R	0	Power State Report 00: Deep Sleep 01: Sleep 10: Hi-Z 11: Play

9.1.1.5 RESET_CTRL_2 REGISTER (OFFSET = DH) [RESET = 0X00]Return to [SUMMARY TABLE](#).

Table 22. DEVICE_CTRL_2 Register

7	6	5	4	3	2	1	0
Sync_done	RESERVED					CTRL_STATE	

R/W	R/W	R/W	R/W	R/W	R/W	R/W
-----	-----	-----	-----	-----	-----	-----

Table 23. DEVICE_CTRL_2 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7	Sync_Flag	R/W		0: sync is not done. 1: sync is properly done
6:1	RESERVED	R/W	0	Reserved.
0	Clear Fault	R/W	0	1: clear analog fault

9.1.1.6 I2C_PAGE_AUTO_INC REGISTER (OFFSET = FH) [RESET = 0X00]

Return to [SUMMARY TABLE](#).

Table 24. I2C_PAGE_AUTO_INC Register

7	6	5	4	3	2	1	0
RESERVED				PAGE_AUTOINC_DIS	RESERVED		
R/W				R/W	R/W		

Table 25. I2C_PAGE_AUTO_INC Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:4	RESERVED	R/W	0000	Reserved
3	PAGE_AUTOINC_DIS	R/W	0	Page auto increment disable Disable page auto increment mode for non-zero books. When end of page is reached, it goes back to the 8th address location of next page when this bit is 0. When this bit is 1, it goes to the 0th location of current page itself like in older part. 0: Enable Page auto increment 1: Disable Page auto increment
2:0	RESERVED	R/W	000	Reserved

9.1.1.7 SIG_CH_CTRL REGISTER (OFFSET = 28H) [RESET = 0X00]Return to [SUMMARY TABLE](#).**Table 26. SIG_CH_CTRL Register**

7	6	5	4	3	2	1	0
BCK_RATIO_CONFIGURE				FS_CFG			
R/W				R/W			

Table 27. SIG_CH_CTRL Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:4	BCK_RATIO_CONFIGURE	R/W	0000	These bits indicate the configured BCK ratio, the number of BCK clocks in one audio frame. 0011: 32FS 0101: 64FS 0111: 128FS 1001: 256FS 1011: 512FS
3:0	FS_CFG	R/W	0000	FS Speed Mode These bits select the FS operation mode, which must be set according to the current audio sampling rate. 4'b0000 Auto detection 4'b0110 32KHz 4'b1000 44.1KHz 4'b1001 48KHz 4'b1010 88.2KHz 4'b1011 96KHz 4'b1101 192KHz Others Reserved

9.1.1.8 CLOCK_DET_CTRL REGISTER (OFFSET = 29H) [RESET = 0X00]

Return to [SUMMARY TABLE](#).

Table 28. CLOCK_DET_CTRL Register

7	6	5	4	3	2	1	0
RESERVED	DIS_DET_PLL	DIS_DET_BCLK_RANGE	DIS_DET_FS	DIS_DET_BCLK	DIS_DET_MISS	RESERVED	RESERVED
R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W

Table 29. CLOCK_DET_CTRL Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7	RESERVED	R/W	0	Reserved
6	DIS_DET_PLL	R/W	0	Ignore PLL underrate/overrate Detection This bit controls whether to ignore the PLL underrate/overrate detection. The PLL clock must be faster than 10MHz or an error will be reported. The PLL must be slower than 150MHz or an error will be reported. When ignored, a PLL underrate/overrate error will not cause a clock error. 0: Regard PLL underrate/overrate detection 1: Ignore PLL underrate/overrate detection
5	DIS_DET_BCLK_RANGE	R/W	0	Ignore BCK Range Detection This bit controls whether to ignore the BCK range detection. The BCK must be stable between 256KHz and 50MHz or an error will be reported. When ignored, a BCK range error will not cause a clock error. 0: Regard BCK Range detection 1: Ignore BCK Range detection
4	DIS_DET_FS	R/W	0	Ignore FS Error Detection This bit controls whether to ignore the FS Error detection. When ignored, FS error will not cause a clock error. But CLKDET_STATUS will report fs error. 0: Regard FS detection 1: Ignore FS detection
3	DIS_DET_BCLK	R/W	0	Ignore BCK Detection This bit controls whether to ignore the BCK detection against LRCK. The BCK must be stable between 32FS and 512FS inclusive or an error will be reported. When ignored, a BCK error will not cause a clock error. 0: Regard BCK detection 1: Ignore BCK detection
2	DIS_DET_MISS	R/W	0	Ignore BCK Missing Detection This bit controls whether to ignore the BCK missing detection. When ignored an BCK missing will not cause a clock error. 0: Regard BCK missing detection 1: Ignore BCK missing detection
1	RESERVED	R/W	0	Reserved
0	RESERVED	R/W	0	Reserved

9.1.1.9 SDOUT_SEL REGISTER (OFFSET = 30H) [RESET = 0H]Return to [SUMMARY TABLE](#).**Table 30. SDOUT_SEL Register**

7	6	5	4	3	2	1	0
RESERVED							SDOUT_SEL
							R/W

Table 31. SDOUT_SEL Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:1	RESERVED		0	Reserved
0	SDOUT_SEL	RW	0	SDOUT Select. This bit selects what is being output as SDOUT pin. 0: SDOUT is the DSP output (post-processing) 1: SDOUT is the DSP input (pre-processing)

9.1.1.10 I2S_CTRL REGISTER (OFFSET = 31H) [RESET = 0X00]Return to [SUMMARY TABLE](#).**Table 32. I2S_CTRL Register**

7	6	5	4	3	2	1	0
RESERVED		BCK_INV	RESERVED		RESERVED		RESERVED
R/W		R/W	R/W	R	R		R/W

Table 33. I2S_CTRL Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:6	RESERVED	R/W	00	Reserved
5	BCK_INV	R/W	0	BCK Polarity This bit sets the inverted BCK mode. In inverted BCK mode, the DAC assumes that the LRCK and DIN edges are aligned to the rising edge of the BCK. Normally they are assumed to be aligned to the falling edge of the BCK. 0: Normal BCK mode 1: Inverted BCK mode
4:0	RESERVED	R/W	00000	Reserved

9.1.1.11 SAP_CTRL1 REGISTER (OFFSET = 33H) [RESET = 0X02]

Return to [SUMMARY TABLE](#).

Table 34. SAP_CTRL1 Register

7	6	5	4	3	2	1	0
I2S_SHIFT_MSB	RESERVED	DATA_FORMAT		I2S_LRCLK_PULSE		WORD_LENGTH	
R/W	R/W	R/W		R/W		R/W	

Table 35. SAP_CTRL1 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7	I2S_SHIFT_MSB	R/W	0	I2S shift MSB
6	RESERVED	R/W	0	Reserved
5:4	DATA_FORMAT	R/W	00	I2S data format These bits control both input and output audio interface formats for DAC operation. 00: I2S 01: TDM/DSP 10: RTJ 11: LTJ
3:2	I2S_LRCLK_PULSE	R/W	00	01: LRCLK pulse < 8 SCLK. If the high width of LRCLK/FS in TDM/DSP mode is less than 8 cycles of SCK, these two bits need set to 01.
1:0	WORD_LENGTH	R/W	10	I2S word length These bits control both input and output audio interface sample word lengths for DAC operation. 00: 16 bits 01: 20 bits 10: 24 bits 11: 32 bits

9.1.1.12 SAP_CTRL2 REGISTER (OFFSET = 34H) [RESET = 0X00]

Return to [SUMMARY TABLE](#).

Table 36. SAP_CTRL2 Register

7	6	5	4	3	2	1	0
I2S_SHIFT_LSB							
R/W							

Table 37. SAP_CTRL2 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:0	I2S_SHIFT	R/W	00000000	I2S shift LSB I2S Shift LSB These bits control the offset of audio data in the audio frame for both input and output. The offset is defined as the number of BCK from the starting (MSB) of audio frame to the starting of the desired audio sample. 000000000: offset = 0 BCK (no offset) 000000001: offset = 1 BCK 000000010: offset = 2 BCKs ... 111111111: offset = 512 BCKs

9.1.1.13 SAP_CTRL3 REGISTER (OFFSET = 35H) [RESET = 0X11]Return to [SUMMARY TABLE](#).**Table 38. SAP_CTRL3 Register**

7	6	5	4	3	2	1	0
RESERVED		LEFT_DAC_DPATH		RESERVED		RIGHT_DAC_DPATH	
R/W		R/W		R/W		R/W	

Table 39. SAP_CTRL3 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:6	RESERVED	R/W	00	Reserved
5:4	LEFT_DAC_DPATH	R/W	01	Left DAC Data Path These bits control the left channel audio data path connection. 00: Zero data (mute) 01: Left channel data 10: Right channel data 11: Reserved (do not set)
3:2	RESERVED	R/W	00	Reserved
1:0	RIGHT_DAC_DPATH	R/W	01	Right DAC Data Path These bits control the right channel audio data path connection. 00: Zero data (mute) 01: Right channel data 10: Left channel data 11: Reserved (do not set)

9.1.1.14 FS_MON REGISTER (OFFSET = 37H) [RESET = 0X00]Return to [SUMMARY TABLE](#).**Table 40. FS_MON Register**

7	6	5	4	3	2	1	0
RESERVED		BCLK_RATIO_MSB		FS_RPT			
R/W		R		R			

Table 41. FS_MON Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:6	RESERVED	R/W	00	Reserved
5:4	BCLK_RATIO_HIGH	R	00	2 MSBs of detected BCK ratio
3:0	FS_RPT	R	0000	These bits indicate the currently detected audio sampling rate. 4'b0000 FS Error 4'b0110 32KHz 4'b1000 Reserved 4'b1001 48KHz 4'b1011 96KHz 4'b1100 176.4KHz 4'b1101 192KHz Others Reserved

9.1.1.15 BCK_MON REGISTER (OFFSET = 38H) [RESET = 0X00]

Return to [SUMMARY TABLE](#).

Table 42. BCK_MON Register

7	6	5	4	3	2	1	0
BCLK_RATIO_LSB							
R							

Table 43. BCK_MON Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7-0	BCLK_RATIO_LSB	R	00000000	These bits indicate the currently detected BCK ratio, the number of BCK clocks in one audio frame. BCK = 32 FS~512 FS

9.1.1.16 CLKDET_STATUS REGISTER (OFFSET = 39H) [RESET = 0X00]

Return to [SUMMARY TABLE](#).

Table 44. CLKDET_STATUS Register

7	6	5	4	3	2	1	0
RESERVED		BCK_OVR_UNR	CLK_OVR_UNR	PLL_LOCK	BCLK_HALT	BCLK_RATIO_ERR	FS_ERR
R/W		R	R	R	R	R	R

Table 45. CLKDET_STATUS Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:6	RESERVED	R/W	00	Reserved
5	BCK_OVR_UNR	R	0	This bit indicates whether the BCLK is overrate or underrate
4	PCLK_OVR_UNR	R	0	This bit indicates whether the PLL is overrate or underrate
3	PLL_LOCK	R	0	This bit indicates whether the PLL is locked or not. The PLL will be reported as unlocked when it is disabled.
2	BCLK_HALT	R	0	This bit indicates whether the BCK is missing or not.
1	BCLK_RATIO_ERR	R	0	This bit indicates whether the BCK is valid or not. The BCK ratio must be stable and in the range of 32-512FS to be valid.
0	FS_ERR	R	0	In auto detection mode (reg_fs_cfg=0), this bit indicated whether the audio sampling rate is valid or not. In nonauto detection mode(reg_fs_cfg!=0), Fs error indicates that configured fs is different with detected fs. Even FS Error Detection Ignore is set, this flag will be also asserted.

9.1.1.17 DIG_VOL_LEFT REGISTER (OFFSET = 4CH) [RESET = 30H]Return to [SUMMARY TABLE](#).

Table 46. DIG_VOL_CTL Register

7	6	5	4	3	2	1	0
PGA_LEFT							
R/W							

Table 47. DIG_VOL_CTL Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:0	PGA_LEFT	R/W	00110000	Left Digital Volume These bits control the left channel digital volume. The digital volume is 24 dB to -103 dB in -0.5 dB step. 00000000: +24.0 dB 00000001: +23.5 dB ... 00101111: +0.5 dB 00110000: 0.0 dB 00110001: -0.5 dB ... 11111110: -103 dB 11111111: Mute

9.1.1.18 DIG_VOL_RIGHT REGISTER (OFFSET = 4DH) [RESET = 30H]Return to [SUMMARY TABLE](#).

Table 48. DIG_VOL_CTL Register

7	6	5	4	3	2	1	0
PGA_RIGHT							
R/W							

Table 49. DIG_VOL_CTL Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:0	PGA_RIGHT	R/W	00110000	Right Digital Volume These bits control the left channel digital volume. The digital volume is 24 dB to -103 dB in -0.5 dB step. 00000000: +24.0 dB 00000001: +23.5 dB ... 00101111: +0.5 dB 00110000: 0.0 dB 00110001: -0.5 dB ... 11111110: -103 dB 11111111: Mute

9.1.1.19 DIG_VOL_CTRL2 REGISTER (OFFSET = 4EH) [RESET = 0X33]Return to [SUMMARY TABLE](#).

Table 50. DIG_VOL_CTRL2 Register

7	6	5	4	3	2	1	0
PGA_RAMP_DOWN_SPEED		PGA_RAMP_DOWN_STEP		PGA_RAMP_UP_SPEED		PGA_RAMP_UP_STEP	
R/W							

Table 51. DIG_VOL_CTRL2 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:6	PGA_RAMP_DOWN_SPEED	R/W	00	Digital Volume Normal Ramp Down Frequency These bits control the frequency of the digital volume updates when the volume is ramping down. The setting here is applied to soft mute request. 00: Update every 1 FS period 01: Update every 2 FS periods 10: Update every 4 FS periods 11: Directly set the volume to zero (Instant mute)
5:4	PGA_RAMP_DOWN_STEP	R/W	11	Digital Volume Normal Ramp Down Step These bits control the step of the digital volume updates when the volume is ramping down. The setting here is applied to soft mute request, asserted by XSMUTE pin or \$0/3\$. 00: Decrement by 4 dB for each update 01: Decrement by 2 dB for each update 10: Decrement by 1 dB for each update 11: Decrement by 0.5 dB for each update
3:2	PGA_RAMP_UP_SPEED	R/W	00	Digital Volume Normal Ramp Up Frequency These bits control the frequency of the digital volume updates when the volume is ramping up. The setting here is applied to soft unmute request, asserted by XSMUTE pin or \$0/3\$. 00: Update every 1 FS period 01: Update every 2 FS periods 10: Update every 4 FS periods 11: Directly restore the volume (Instant unmute)
1:0	PGA_RAMP_UP_STEP	R/W	11	Digital Volume Normal Ramp Up Step These bits control the step of the digital volume updates when the volume is ramping up. The setting here is applied to soft unmute request, asserted by XSMUTE pin or \$0/3\$. 00: Increment by 4 dB for each update 01: Increment by 2 dB for each update 10: Increment by 1 dB for each update 11: Increment by 0.5 dB for each update

9.1.1.20 DIG_VOL_CTRL3 REGISTER (OFFSET = 4FH) [RESET = 0X30]

Return to [SUMMARY TABLE](#).

Table 52. DIG_VOL_CTRL3 Register

7	6	5	4	3	2	1	0
FAST_RAMP_DOWN_SPEED		FAST_RAMP_DOWN_STEP		RESERVED			
R/W							

Table 53. DIG_VOL_CTRL3 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:6	FAST_RAMP_DOWN_SPEED	R/W	00	Digital volume emergency ramp down frequency These bits control the frequency of the digital volume updates when the volume is ramping down due to clock error or power outage, which usually needs faster ramp down compared to normal soft mute. 00: Update every 1FS period 01: Update every 2FS periods 10: Update every 4FS periods 11: Directly set the volume to zero (Instant mute)

5:4	FAST_RAMP_DOWN_STEP	R/W	11	Digital volume emergency ramp down step These bits control the step of the digital volume updates when the volume is ramping down due to clock error or power outage, which usually needs faster ramp down compared to normal soft mute. 00: Decrement by 4dB for each update 01: Decrement by 2dB for each update 10: Decrement by 1dB for each update 11: Decrement by 0.5dB for each update
3:0	RESERVED	R/W	0000	Reserved

9.1.1.21 ANA_CTRL REGISTER (OFFSET = 53H) [RESET = 0X49]

Return to [SUMMARY TABLE](#).

Table 54. ANA_CTRL Register

7	6	5	4	3	2	1	0
BW							
RW							

Table 55. ANA_CTRL Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:0	Bandwidth	R/W	0x49	Bandwidth depends on Fsw: BD mode: Fsw=260kHz: 0xCC; Fsw=384kHz: 0x98; Fsw=480kHz: 0x78; Fsw=768kHz: 0x48; 1SPW mode: Fsw=260kHz: 0xFC; Fsw=384kHz: 0xDC; Fsw=480kHz: 0xBC; Fsw=768kHz: 0x88;

9.1.1.22 AGAIN REGISTER (OFFSET = 54H) [RESET = 0X00]

Return to [SUMMARY TABLE](#).

Table 56. AGAIN Register

7	6	5	4	3	2	1	0
RESERVED			ANA_GAIN				
R/W							

Table 57. AGAIN Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:5	RESERVED	R/W	000	Reserved
4:0	ANA_GAIN	R/W	00000	Analog Gain Control This bit controls the right channel analog gain. 00000: 0 dB 00001: -0.5db ... 11111: -15.5 dB

9.1.1.23 BQ_WR_CTRL1 REGISTER (OFFSET = 5CH) [RESET = 0X00]Return to [SUMMARY TABLE](#).**Table 58. BQ_WR_CTRL1 Register**

7	6	5	4	3	2	1	0
RESERVED							BQ_WR_FIRST_COEF
R/W							

Table 59. BQ_WR_CTRL1 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7-1	RESERVED	R/W	0000000	Reserved
0	BQ_WR_FIRST_COEF	R/W	0	Indicate the first coefficient of a BQ is starting to write.

9.1.1.24 GPIO0/ADR REGISTER (OFFSET = 62H) [RESET = 2EH]Return to [SUMMARY TABLE](#).**Table 60. GPIO0_ADR Register**

7	6	5	4	3	2	1	0
		ADR_Dir	GPIO0 function				
RW	R/W	R/W	R/W	R/W	R/W	R/W	R/W

Table 61. GPIO0_ADR Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:5	Reserved	R/W	1h	Reserved
4:0	GPIO0	R/W	0Eh	01000: open drain output as fault warning; 01001: open drain output as clock invalid 11010: as PVDD drop flag 01110: open drain output as fault Others: reserved

9.1.1.25 GPIO1 REGISTER (OFFSET = 63H) [RESET = 00H]Return to [SUMMARY TABLE](#).**Table 62. GPIO1 Register**

7	6	5	4	3	2	1	0
		ADR_Dir	GPIO1 function				
RW	R/W	R/W	R/W	R/W	R/W	R/W	R/W

Table 63. GPIO1 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:6	Reserved	R/W	0h	Reserved
5	ADR_Dir	R/W	0h	1: GPIO as output. 0: GPIO as input.
4:0	GPIO1	R/W	0h	01000: open drain output as fault warning; 01100: Sdout 01110: as fault pin Others: reserved

9.1.1.26 GPIO2 REGISTER (OFFSET = 64H) [RESET = 2CH]

Return to [SUMMARY TABLE](#).

Table 64. GPIO2 Register

7	6	5	4	3	2	1	0
Reserved		ADR_Dir	GPIO0 function				
RW	R/W	R/W	R/W	R/W	R/W	R/W	R/W

Table 65. GPIO2 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:6	Reserved	R/W	0	Reserved
5	ADR_Dir	R/W	1h	1: GPIO as output. 0: GPIO as input.
4:0	GPIO2	R/W	0Ch	01000: open drain output as fault warning; 01100: Sdout 01110: as fault pin Others: reserved

9.1.1.27 DIE_ID REGISTER (OFFSET = 67H) [RESET = 0H]

Return to [SUMMARY TABLE](#).

Table 66. DIE_ID Register

7	6	5	4	3	2	1	0
DIE_ID							
RO							

Table 67. DIE_ID Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:0	DIE_ID	RO	0	Die ID of the device

9.1.1.28 PHASE_CTRL REGISTER (OFFSET = 6AH) [RESET = 0X00]Return to [SUMMARY TABLE](#).**Table 68. PHASE_CTRL Register**

7	6	5	4	3	2	1	0
SYNC_MODE				RCG_INPHASE	RCG_PHASE_SEL		
R/W							

Table 69. PHASE_CTRL Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:4	SYNC_MODE	R/W	0000	synching mode: 4'h0: no phase sync 4'hD: GPI phase sync 4'hE: reg phase sync 4'hF: lrcclk phase sync
3	RAMP_PHASE_SEL	R/W	00	selects the phase of Ch2: 0: ph_ch2 = ph_ch1 + 180 deg 1: ph_ch2 = ph_ch1
2:0	I2S_SYNC_EN	R/W	000	select ramp clock phase when multi devices integrated in one system to reduce EMI and peak supply peak current, it is recommended set all devices the same RAMP frequency and same spread spectrum. it must be set before driving device into PLAY mode if this feature is needed. selects the phase of Ch1: 0: 0 deg 1: 60 deg 2: 90 deg 3: 120 deg (intended for 3-chip cancellation) 4: 180 deg (intended for 2-chip cancellation) 5: 240 deg (intended for 3-chip cancellation) 6: 270 deg 7: 300 deg

9.1.1.29 CHAN_FAULT REGISTER (OFFSET = 70H) [RESET = 0X00]Return to [SUMMARY TABLE](#).**Table 70. CHAN_FAULT Register**

7	6	5	4	3	2	1	0
RESERVED		CBCF_CH2	CBCF_CH1	CH1_DC_1	CH2_DC_1	CH1_OC_I	CH2_OC_I
R							

Table 71. CHAN_FAULT Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7:6	RESERVED	R	00	Reserved
5	CBCF_CH2	R	0	Right channel cycle by cycle over current fault
4	CBCF_CH1	R	0	Left channel cycle by cycle over current fault
3	CH1_DC_1	R	0	Left channel DC fault
2	CH2_DC_1	R	0	Right channel DC fault
1	CH1_OC_I	R	0	Left channel over current fault
0	CH2_OC_I	R	0	Right channel over current fault

9.1.1.30 GLOBAL_FAULT1 REGISTER (OFFSET = 71H) [RESET = 0H]

Return to [SUMMARY TABLE](#).

Table 72. GLOBAL_FAULT1 Register

7	6	5	4	3	2	1	0
OTF	Reserved	OTP_UERR	OTP_CERR	PDROP	CLKF	POV	PUV
R							

Table 73. GLOBAL_FAULT1 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7	OTP	R	0	1: over temperature error
6	Reserved	R	0	Reserved
5	OTP_UERR	R	0	1: OTP uncorrectable error
4	OTP_UERR	R	0	1: OTP correctable error
3	PDROP	R	0	1: PVDD drop
2	CLKF	R	0	1: clock fault
1	POV	R	0	1: PVDD Over-voltage fault
0	PUV	R	0	1: PVDD Under-voltage fault

9.1.1.31 WARNING1 (OFFSET = 72H) [RESET = 0H]Return to [SUMMARY TABLE](#).

Table 74. WARNING1 Register

7	6	5	4	3	2	1	0
CLAMP_CH1	CLAMP_CH2	Reserved					OTSD_I
R							

Table 75. WARNING1 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7	CLAMP_CH1	R	0	Left channel clamp warning
6	CLAMP_CH2	R	0	Right channel clamp warning
5:1	Reserved	R	00000	Reserved
0	OTSD_I	R	0	Over temperature shut down fault

9.1.1.32 WARNING2 (OFFSET = 73H) [RESET = 0X00]Return to [SUMMARY TABLE](#).

Table 76.OT_WARNING Register

7	6	5	4	3	2	1	0
CLIP_CH1	CLIP_CH2	CBCW_CH1	CBCW_CH2	OTW_LEVEL4	OTW_LEVEL3	OTW_LEVEL2	OTW_LEVEL1
R							

Table 77.OT_WARNING Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7	CLIP_CH1	R	0	Left channel clip warning
6	CLIP_CH2	R	0	Right channel clip warning
5	CBCW_CH1	R	0	Left channel cycle by cycle over current warning
4	CBCW_CH2	R	0	Right channel cycle by cycle over current warning
3	OTW_LEVEL4	R	0	OT Warning 146
2	OTW_LEVEL3	R	0	OT Warning 135
1	OTW_LEVEL2	R	0	OT Warning 125
0	OTW_LEVEL1	R	0	OT Warning 113

9.1.1.33 PIN_CONTROL1 REGISTER (OFFSET = 74H) [RESET = 0X00]Return to [SUMMARY TABLE](#).

Table 78. PIN_CONTROL1 Register

7	6	5	4	3	2	1	0
MASK_OTF	MASK_PDROP	MASK_CLIP	MASK_CLKF	MASK_PUV	MASK_POV	MASK_DC	MASK_OC
R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W

Table 79. PIN_CONTROL1 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7	MASK_OTF	R/W	0	Mask OTSD fault report
6	MASK_PDROP	R/W	0	Mask PVDD drop fault report
5	MASK_CLIP	R/W	0	Mask clip fault report
4	MASK_CLKF	R/W	0	Mask clock fault report
3	MASK_PUV	R/W	0	Mask PVDD UV fault report
2	MASK_POV	R/W	0	Mask PVDD OV fault report
1	MASK_DC	R/W	0	Mask DC fault report
0	MASK_OC	R/W	0	Mask OC fault report

9.1.1.34 PIN_CONTROL2 REGISTER (OFFSET = 75H) [RESET = 0XF8]Return to [SUMMARY TABLE](#).**Table 80. PIN_CONTROL2 Register**

7	6	5	4	3	2	1	0
RESERVED	LATCH_CBCW	LATCH_CLKF	LATCH_OTF	LATCH_OTW	MASK_OTW	MASK_CBCW	MASK_CBCF
R/W							

Table 81. PIN_CONTROL2 Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7	RESERVED	R/W	1	
6	LATCH_CBCW	R/W	1	1: latch cbcw reported to warningz
5	LATCH_CLKF	R/W	1	1: latch clkf reported to faultz
4	LATCH_OTF	R/W	1	1: latch otsd reported to faultz
3	LATCH_OTW	R/W	1	1: latch otw reported to warningz
2	MASK_OTW	R/W	0	Mask OT warning report
1	MASK_CBCW	R/W	0	Mask CBC warning report
0	MASK_CBCF	R/W	0	Mask CBC fault report

9.1.1.35 MISC_CONTROL REGISTER (OFFSET = 76H) [RESET = 0X00]Return to [SUMMARY TABLE](#).**Table 82. MISC_CONTROL Register**

7	6	5	4	3	2	1	0
LATCH_CLKDET_2REG	LATCH_CLIP	LATCH_PVDDF	OTF_AUTOREC_EN	LATCH_PDROP	Reserved	LATCH-CLAMP	ASK_CLAMP
R/W							

Table 83. MISC_CONTROL Register Field Descriptions

BIT	FIELD	TYPE	RESET	DESCRIPTION
7	LATCH_CLKDET_2REG	R/W	0	1: latch detailed clock detections reported to regmap
6	LATCH_CLIP	R/W	0	1: latch clip reported to warningz
5	LATCH_PVDDF	R/W	1	1: latch pov/puv reported to faultz
4	OTF_AUTOREC_EN	R/W	0	OTF auto-recovery enable
3	LATCH_PDROP	R/W	0	1: latch pdrop reported to faultz
2	Reserved	R/W	0	Reserved
1	LATCH-CLAMP	R/W	0	latches clamp reported to warningz
0	ASK_CLAMP	R/W	1	masks clamp reported to warningz

10. 应用和实现

NOTE

The information provided in this section is not part of the AnalogSemi component specification. Hence, AnalogSemi does not warrant its completeness or accuracy. Customers are responsible for determining suitability of components and system functionality for their applications. Validation and testing should be performed prior to design implementation.

10.1 自举电容

AU6815 建议使用 0.22uF-0.47uF 的电容器用于自举电容,通常建议使用 0.47uF。

10.1.1 电感选型

It is required that the peak current be smaller than the OCP (over current protection) value which is 5A. There are 3 cases which cause high peak current flow through inductor.

1. During power up (idle state, no audio input), the duty cycle increases from 0 to θ .

$$I_{\text{peak_power_up}} \approx PVDD \times \sqrt{C/L} \times \sin(1/\sqrt{L \times C} \times \theta / F_{\text{sw}}) \quad (1)$$

Where:

$\theta = 0.5$ (BD Modulation), 0.14 (1SPW Modulation), 0.14 (Hybrid Modulation). This formula just provides a rough estimation. It is suggested to measure the start-up current based on LC filter.

Table 84. Peak Current during Power-Up

PVDD	L (μH)	C (μF)	f _w (kHz)	I _{peak_power_up}
24	4.7	0.68	384	6.07A (> 5A OCP), not recommended
24	4.7	0.68	768	3.25A
24	10	0.68	384	3A
24	10	0.68	768	1.55A
12	4.7	0.68	384	3.32A
12	10	0.68	384	1.55A

2. During music playing, some audio burst signal (high frequency) with very hard PVDD clipping will cause PWM duty cycle increase dramatically. This is the worst case and it rarely happens.

$$I_{\text{peak_clipping}} \approx PVDD \times (1 - \theta) / (F_{\text{sw}} \times L) \quad (2)$$

3. Peak current due to Max output power. Ignore the ripple current flow through capacitor here.

$$I_{\text{peak_output_power}} \approx \sqrt{2 \times \text{Max_Output_Power} / R_{\text{speaker_Load}}} \quad (3)$$

Same PVDD and switching frequency, larger inductance means smaller idle current for lower power dissipation.

It is suggested that inductors saturation current I_{SAT} , be larger than the amplifiers peak current during power-up and play audio.

$$I_{SAT} \geq \max(I_{peak_power_up}, I_{peak_clipping}, I_{peak_output_power}) \quad (4)$$

In addition, the effective inductance at the peak current is required to be at least 80% of the inductance value in Table 85, to meet datasheet specifications.

The minimum inductance is given in Table 85.

Table 85. LC Filter Recommendation

VDD (V)	Switching Frequency (kHz)	Modulation Scheme	Recommended Minimum Inductance (μH) for LC Filter Design
≤ 12	384	BD	4.7μH + 0.68μF
> 12			10μH + 0.68μF
≤ 12	384	1SPW/Hybrid	10μH + 0.68μF
> 12			15μH + 0.68μF

For higher switching frequency (F_{sw}), select inductors with minimum inductance to be $384\text{kHz} / F_{sw} \times L$.

10.1.2 供电去耦电容设计

推荐使用 0.1μF 电容用于高频滤波，该电容建议尽量靠近 PVDD，此外建议使用不小于 4 个 22μF 容量的电容用于去耦。如果是驱动低音，则建议越大越能提供瞬时电流，保证 PVDD 电压稳定。

10.1.3 输出 EMI 滤波设计

如果是 EMI 考虑，AU6815 集成了高阶的展频配合硬件电路设计，详细参数设置，请联系类比支持。

10.2 TYPICAL APPLICATIONS

10.2.1 2.0 (STEREO BTL) SYSTEM

Figure 19 shows the 2.0 (Stereo BTL) system application.


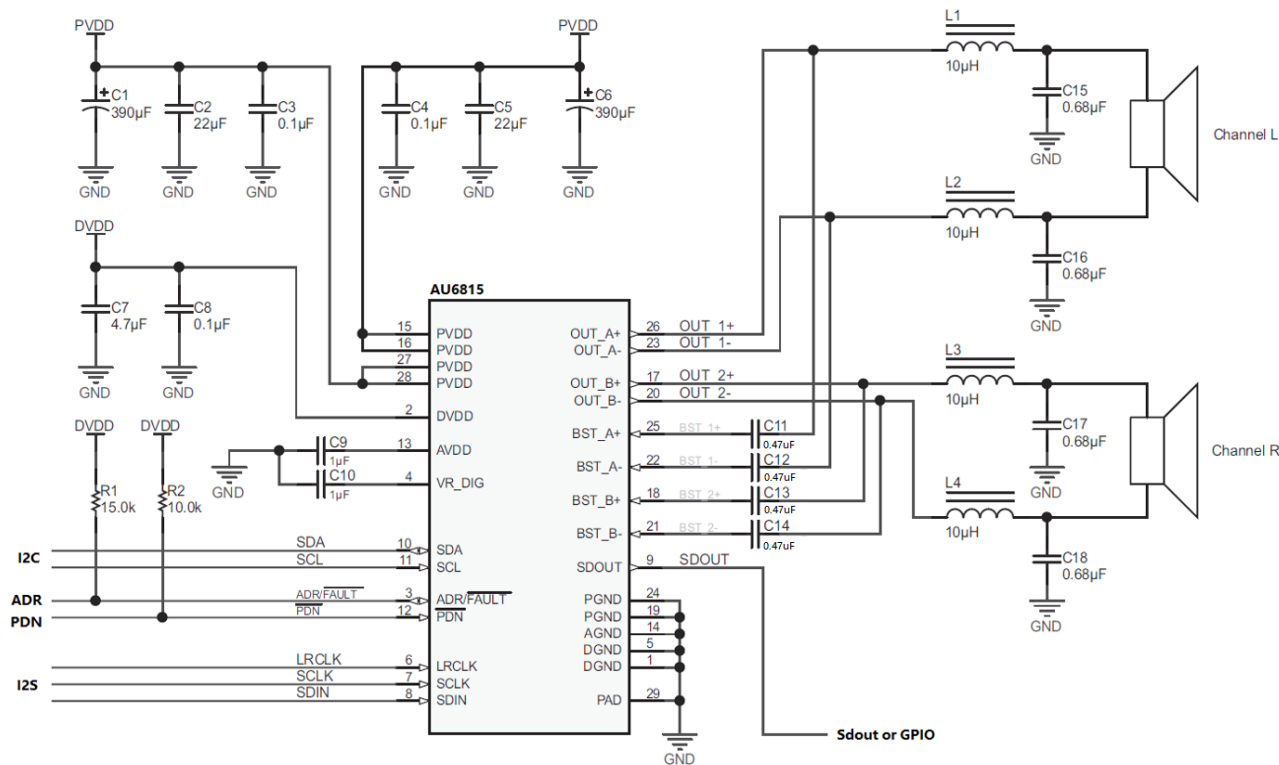


Figure 19. 2.0 (Stereo BTL) System Application Schematic

10.2.2 2.0 一站式调音软件平台

类比半导体提供一站式软件调试平台 ASATP, 可以直接通过输入调试参数, 在评估板验证完毕后直接导出驱动配置头文件方便客户软件集成。

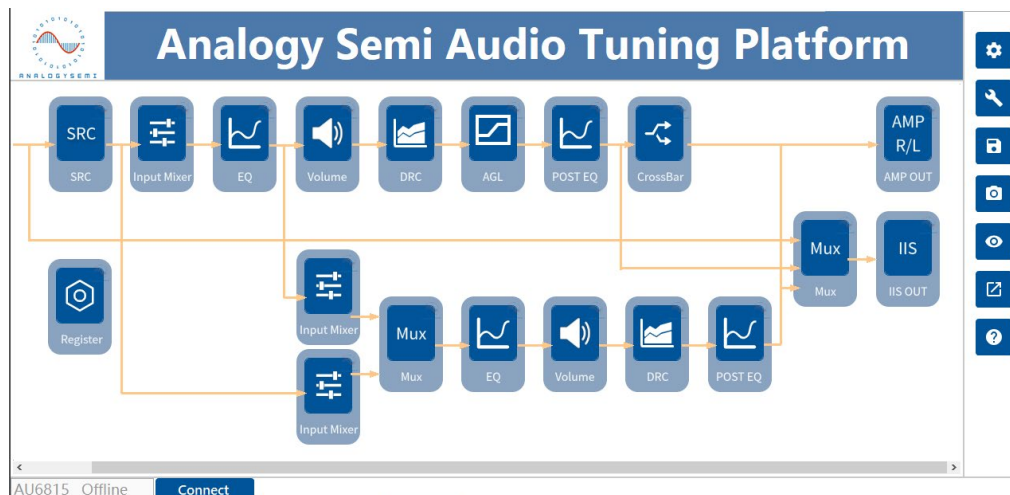

类比调音平台 ASATP

11. 电源供电推荐

The AU6815 device requires two power supplies for proper operation. A high-voltage supply called PVDD is required to power the output stage of the speaker amplifier and its associated circuitry. Additionally, one

low-voltage power supply called DVDD is required to power the various low-power portions of the device. The allowable voltage range for both PVDD and DVDD supplies are listed in the [RECOMMENDED OPERATING CONDITIONS](#) table. Once the device has been initialized, PVDD must keep within the normal operation voltage. Once PVDD is lower than 3.5V, all registers need re-initialization again.

TBD

Figure 20. Power Supply Function Block Diagram

11.1 DVDD SUPPLY

DVDD 支持 3.3V 和 1.8V，通常建议使用 0.1uF 加 4.7uF 作为去耦。

11.2 PVDD SUPPLY

PVDD 支持范围为 4.5V-21V，一半建议 0.1uF 加 4 个 22uF 以上电容用于去耦。

12. 布局

请参考类比半导体评估板。

13. PACKAGE INFORMATION

The AU6815 is available in the TSSOP-28 packages. Figure 21 shows the package view.

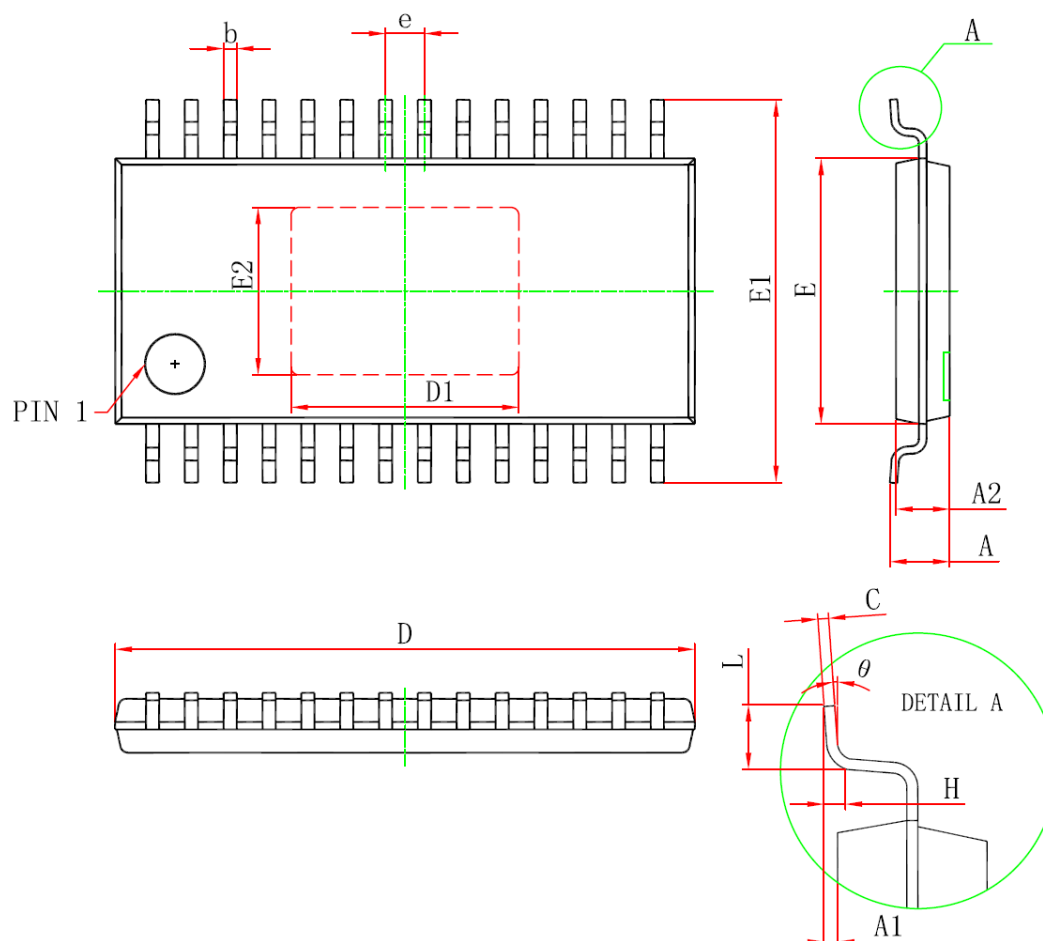


Figure 21. Package View

Table 86 provides detailed information about the dimensions.

Table 86. Dimensions

SYMBOL	DIMENSIONS IN MILLIMETERS		DIMENSIONS IN INCHES	
	MIN	MAX	MIN	MAX
D	9.600	9.800	0.378	0.386
D1	3.710	3.910	0.146	0.154
E	4.300	4.500	0.169	0.177
b	0.190	0.300	0.007	0.012
c	0.090	0.200	0.004	0.008
E1	6.250	6.550	0.246	0.258
E2	2.700	2.900	0.106	0.122
A		1.100		0.043
A2	0.800	1.000	0.031	0.039
A1	0.020	0.150	0.001	0.006
e	0.65 (BSC)		0.026 (BSC)	
L	0.500	0.700	0.02	0.028
H	0.25 (TYP)		0.01 (TYP)	
θ	1°	7°	1°	7°

14. TAPE AND REEL INFORMATION

请联系类比半导体获取。

REVISION HISTORY

REVISION	DATE	DESCRIPTION
Rel 1.0	17 Sept 2023	Rev 1.0 Release
Rel 1.1	5 Nov 2023	Rev 1.1 release: 1.Updated TOC curves. 2.Updated typ error and OCP threshold to 5.5A typ.
Rel 1.1.1	27 Nov 2023	Correct typ errors.